#### **SECTION 3**

# ATION ALLANA SURVEYS AREA NAVIGATION APPROACH (CONVENTIONAL LANDING)

# SECTION 3 TABLE OF CONTENTS

# AREA NAVIGATION APPROACH (CONVENTIONAL LANDING) SURVEYS



SUBSECTION	PAGE
1. DESCRIPTION	3.1
3 0	
2. DATUM TIE AND LOCAL CONTROL	3.1.
	3.1.
4. RUNWAY AND STOPWAY POINTS	3.1.
	3.2.
6. OBSTRUCTIONS	3.2.
6.1. DEFINITION	3.2.
6.2. OBSTRUCTION IDENTIFICATION SURFACES	3.3.
6.3. SPECIAL CASES	3.7.
6.4. SELECTION	
7. PLANIMETRIC DETAIL	3.10.
8. METEOROLOGICAL APPARATUS	3.10.
9. MISCELLANEOUS	3.10.
10. DATA DELIVERY	3.10.

#### TABLE OF CONTENT CONT.

\_\_\_\_\_

FIGURES	
FIGURE 3.1	RUNWAY NUMBERS AND REQUIRED POINTS FOR SPECIALLY PREPARED HARD SURFACE RUNWAYS/STOPWAYS
FIGURE 3.2	OBSTRUCTION IDENTIFICATION SURFACES - PRECISION APPROACH, PRIMARY AND TRANSITIONS
FIGURE 3.3	OBSTRUCTION IDENTIFICATION SURFACE - MISSED PRECISION APPROACH
FIGURE 3.4	OBSTRUCTION IDENTIFICATION SURFACE - NONPRECISION APPROACH
FIGURE 3.5	OBSTRUCTION REPRESENTATION IN THE PRIMARY AREA
FIGURE 3.6	OBJECT REPRESENTATION IN FIRST 2,566 FEET OF A PRECISION APPROACH AREA
FIGURE 3.7	OBSTRUCTION REPRESENTATION IN THE PRECISION APPROACH AREA
FIGURE 3.8	OBSTRUCTION REPRESENTATION IN THE TRANSITION AREAS
FIGURE 3.9	OBSTRUCTION REPRESENTATION IN THE MISSED APPROACH AREA
FIGURE 3.10	OBSTRUCTING MOBILE OBJECT AREAS AND ESTIMATED MAXIMUM ELEVATION (EMF.) POINTS

# SECTION 3: AREA NAVIGATION APPROACH (CONVENTIONAL LANDING) SURVEYS

#### 1. DESCRIPTION

Area Navigation Approach (ANA) surveys for conventional landing provide runway, obstruction, and other information to support precision and nonprecision instrument approach procedure development for conventional aircraft using area navigation systems, such as, GPS. In addition, these surveys provide positions and elevations for selected navigational aids (NAVAIDS) associated with the airport.

ANA surveys also establish (if it does not exist) geodetic control in the airport vicinity consisting of permanent survey marks accurately connected to the National Spatial Reference System (NSRS). This control and the NSRS connection assures accurate relativity between surveyed points on the airport and between these points and other surveyed points in the National Airspace System (NAS), including the navigation satellites. In addition, this control supports not only ANA surveys, but also future engineering activities, such as, runway/taxiway construction, NAVAID siting, obstruction clearing, road building, and other airport related projects.

# 2. DATUM TIE AND LOCAL CONTROL

Datum tie and local control requirements for all surveys accomplished in accordance with FAA No. 405 standards are identified in Appendix 3.

#### 3. ACCURACIES

Accuracy requirements for all data provided in accordance with FAA No. 405 standards are identified in Appendix 5.

#### 4. RUNWAY AND STOPWAY POINTS

Runway/stopway data shall be provided for all runways and stopways with a specially prepared hard surface (SPHS) existing at the time of the field survey. Data shall be provided for non-SPHS runways only if specifically requested by appropriate Federal Aviation Administration authorities. Data shall be provided for non-SPHS stopways if the stopway was officially designated a stopway by appropriate airport authorities.

Unless otherwise stated, all runway/stopway points shall be on the runway/stopway centerline.

Runways shall be identified by the number painted on the runway at the time of the field survey. If a number is not painted on the runway, the runway number published in the "U.S. Terminal Procedures" current at the time of the field survey shall be used.

## 4.1. REQUIRED DATA FOR RUNWAYS AND STOPWAYS

Required data for SPHS and Non-SPHS runways and stopways are presented in Table 3.1. (Also see Figure 3.1).

FAA No. 405 9/1/96

TABLE 3.1 REQUIRED RUNWAY/STOPWAY DATA

RWY/STWY POINT	REQUIRE SPHS RWY	D DATA NON-SPHS RWY
AIRPORT ELEV	D/E	D/E
RUNWAY ENDS	P/E	P/N
INTERSECTION OF SPHS RWYS	D/E	N/N
DISPLACED THLDS	P/E	P/E*
TOUCHDOWN ZONI	E N/E	N/N
STOPWAY ENDS	D/E	D/E
SUPPLEMENTAL PROFILE POINTS	D/E	N/N
POINT ABEAM GS	P/E	N/N
POINT ABEAM MLSEL	P/E	N/N
POINT ABEAM OFFSET LOC	P/N	N/N
POINT ABEAM OFFSET LDA	P/N	N/N
POINT ABEAM OFFSET SDF	P/N	N/N
POINT ABEAM OFFSET MLSAZ	P/N	N/N

- C ELEVATION REQUIRED ONLY IF AN OBSTRUCTION SURVEY WAS PERFORMED
- D = DISTANCE FROM RUNWAY'S : (1) NEAR END FOR AIRPORT ELEVATION, (2) APPROACH END FOR RUNWAY INTERSECTIONS AND SUPPLEMENTAL PROFILE POINTS, AND (3) STOP END FOR STOPWAYS
- E = ELEVATION
- N = POSITION, DISTANCE, OR ELEVATION NOT REQUIRED
- P = LATITUDE AND LONGITUDE

A FACILITY IS CONSIDERED OFFSET IF LOCATED MORE THAN 10 FEET FROM THE RUNWAY CENTERLINE/CENTERLINE EXTENDED.

#### 5. NAVIGATIONAL AIDS

#### **ELECTRONIC NAVAIDS**

A position, and sometimes an elevation, depending on the navigational aid (NAVAID), shall be determined for selected electronic NAVAIDS associated with the airport. The horizontal and vertical survey points for electronic NAVAIDS are listed in Appendix 4.

Survey data is required for NAVAIDS meeting all of the following three criteria:

- The NAVAID is listed in Appendix 4.
- The NAVAID is located within 10 nautical miles of the Airport Reference Point.
- The NAVAID is associated with an instrument approach procedure for the airport being surveyed and the procedure is published in the United States Government flight information publication "U.S. Terminal Procedures" current at the time of the field survey. This requirement also applies to Airport Surveillance Radars.

If the NAVAID is also an obstruction, the obstruction requirements of Subsection 6 of this section also apply.

#### VISUAL NAVAIDS

Visual NAVAIDS are not required.

#### 6. OBSTRUCTIONS

#### 6.1. DEFINITION

An obstruction, for purposes of this section, is any object that penetrates an ANA obstruction identification surface (OIS).

#### 6.2. OBSTRUCTION IDENTIFICATION SURFACES

#### **PRECISION ANA**

OIS dimensions for precision ANA surveys are presented in Table 3.2 through Table 3.5. and Figure 3.2 and Figure 3.3.

#### **TABLE 3.2**

# PRIMARY SURFACE PRECISION AREA NAVIGATION APPROACH

BEGINS 200 FT. ON APPROACH SIDE OF THRESHOLD

LENGTH DISTANCE BETWEEN RUNWAY THRESHOLDS PLUS

400 FT.

WIDTH AT THRESHOLD 1,000 FT

WIDTH AT THRESHOLD PLUS 200 FT. 1,000 FT

SLOPE SEE "ELEVATION" BELOW

ELEVATION BETWEEN THRESHOLDS - ELEVATION OF NEAREST

POINT ON RUNWAY CENTERLINE

BEYOND THRESHOLD - ELEVATION OF RUNWAY

CENTERLINE AT THRESHOLD

THE PRIMARY SURFACE IS A 1,000 FOOT WIDE RECTANGLE CENTERED ON THE RUNWAY CENTERLINE, BEGINNING 200 FEET ON THE APPROACH SIDE OF A RUNWAY THRESHOLD AND EXTENDING TO 200 FEET ON THE APPROACH SIDE OF THE OPPOSITE RUNWAY THRESHOLD.

3.3.

FAA No. 405 4/15/98 CHANGE 1

#### **TABLE 3.3**

# APPROACH SURFACE PRECISION AREA NAVIGATION APPROACH

BEGINS 200 FT. ON APPROACH SIDE OF THRESHOLD (AT END

OF PRIMARY SURFACE)

LENGTH 50,000 FT.

BEGINNING WIDTH 800 FT.

WIDTH AT 50,000 FT. 4,400 FT.

SLOPE 50:1 FOR FIRST 2,566 FT. THEN 34:1 TO END OF

APPROACH SURFACE

ELEVATION AT BEGINNING ELEVATION OF THRESHOLD

ELEVATION AT 2,566 FT. 51.3 FT. ABOVE THRESHOLD

ELEVATION AT 50,000 FT. 1,446.4 FT. ABOVE THRESHOLD

THE APPROACH SURFACE IS CENTERED ON THE RUNWAY CENTERLINE/CENTERLINE EXTENDED.

#### **TABLE 3.4**

# APPROACH TRANSITION SURFACE PRECISION AREA NAVIGATION APPROACH

BEGINS 200 FT. ON APPROACH SIDE OF THRESHOLD

LENGTH 50,000 FT.

BEGINNING WIDTH 600 FT. (EACH SIDE OF APPROACH SURFACE)

WIDTH AT 50,000 FT. 6,376 FT. (EACH SIDE OF APPROACH SURFACE)

SLOPE 7:1 PERPENDICULAR TO RUNWAY

CENTERLINE/CENTERLINE EXTENDED

TOP ELEVATION AT BEGINNING 85.7 FT. ABOVE THRESHOLD

TOP ELEVATION AT 2,566 FT. 179.4 FT. ABOVE THRESHOLD

TOP ELEVATION AT 50,000 FT. 2,357.3 FT. ABOVE THRESHOLD

TRANSITION SURFACES EXISTS ALONG THE ENTIRE LENGTH, AND ON EACH SIDE, OF THE APPROACH SURFACE. THE WIDTH AND SLOPE ARE MEASURED PERPENDICULAR TO THE RUNWAY CENTERLINE/CENTERLINE EXTENDED.

FAA No. 405 9/1/96

#### **TABLE 3.5**

#### MISSED APPROACH SURFACE PRECISION AREA NAVIGATION APPROACH

1,300 FT. ON APPROACH SIDE OF THRESHOLD **BEGINS** 

**LENGTH** 7,800 FT.

**BEGINNING WIDTH** 2,333.3 FT.

WIDTH AT 7,800 FT. 6,200 FT.

**SLOPE** 40:1

22 FT. ABOVE THRESHOLD **ELEVATION AT BEGINNING** 

217 FT. ABOVE THRESHOLD ELEVATION AT 7,800 FT.

THE MISSED APPROACH SURFACE IS CENTERED ON THE RUNWAY CENTERLINE/CENTERLINE OSKILLINING NO.

EXTENDED.

#### NONPRECISION ANA

OIS dimensions for nonprecision ANA surveys are presented in Table 3.6 and Figure 3.4.

#### TABLE 3.6

#### APPROACH SURFACE NONPRECISION AREA NAVIGATION APPROACH

\_\_\_\_\_

BEGINS TO BE DEVELOPED

LENGTH TO BE DEVELOPED

WIDTH AT BEGINNING TO BE DEVELOPED

WIDTH AT END TO BE DEVELOPED

SLOPE TO BE DEVELOPED

ELEVATION AT BEGINNING TO BE DEVELOPED

ELEVATION AT END TO BE DEVELOPED

6.3. SPECIAL CASES

- Catenaries

In most cases, the position and elevation of supporting towers will adequately represent catenaries. These towers shall be treated as any other potential obstruction. However, if one, or both, towers are outside the limits of the obstruction surface, the catenary itself may become a significant obstruction. In these cases, a position and elevation shall be provided on the imaginary straight line connecting the tops of the two adjacent catenary support towers at the highest point within the obstruction surface. The elevation of this point shall be carried as an estimated maximum elevation (EME).

- Vehicular Traverse Ways

In general, a vehicular traverse way shall be treated as any other obstruction, except that the appropriate vehicle height allowance must be included in the elevation. (See "Obstruction Exemptions" in this subsection for possible exemptions that may apply to vehicular traverse ways).

Vehicle Height Allowances follow:

Noninterstate roads 15 feet

Interstate roads 17 feet

Railroads 23 feet

FAA No. 405 9/1/96

#### - Mobile Obstructions

Representative obstructions that are mobile within a defined area (except vehicles on roads and railroads, and vessels which are treated under separate headings) shall have an estimated maximum elevation (EME) determined for each area. EME points shall be selected at: (1) the point nearest to the runway centerline at the threshold for primary surface penetrations, (2) the most penetrating point for approach surface penetrations, and (3) as appropriate to represent each mobile object area. (See Figure 3.10)

The word "MOBILE," which always implies an EME, shall be included in the object name, such as, "MOBILE CRANE."

#### - Obstructions Under Construction

Representative obstructions that are under construction shall be identified as being under construction, such as, "BUILDING UNDER CONSTRUCTION." The elevation at the time of the survey shall be carried. However, if a construction crane extends above the feature under construction, it is necessary and sufficient to carry the elevation and position of the crane.

#### - Vessels

Because of uncertainties in determining maximum vessel heights, travel limits, and frequency of passage, vessel heights and locations shall not be provided. However, if a possible obstructing condition exists, an obstructing vessel caution shall be provided on ANA survey products cautioning that vessels may obstruct at certain times and that further investigation by the data user regarding maximum vessel height, travel limits, and frequency of passage is advised. This exemption does not apply to vessels that are permanently moored.

- Manmade Objects Equal to or Greater than 200 Feet Above Ground Level (AGL)

The AGL elevation shall be determined for manmade objects equal to, or greater than, 200 feet AGL. The AGL shall be measured from the highest point of ground in contact with either the object or the structure on which the object rests. This AGL requirement applies only to representative objects that normally would be carried on ANA survey products and does not necessarily require measuring all 200+ AGL manmade objects in the survey area.

#### - Obstruction Exemptions

The following obstructions are not required to be measured or carried on ANA Conventional Landing products:

- Vegetation that is both obstructing by less than three feet and with a maximum cross sectional diameter no greater than one-half inch where transected by an obstruction surface.
- Annual vegetation, such as annual weeds, corn, millet, and sugar cane.
- Frangible objects under the control of airport authorities with locations fixed by function. Examples are runway and taxiway signs, and many approach light structures.
- Roads with restricted public access that are intended for airport/facility maintenance only. This exemption does not apply to airport service roads associated with other airport operations, such as, food, fuel, and freight transportation.
- Construction equipment and debris, including dirt piles and batch plants, that are: (1) temporary in nature, (2) under the control of airport authorities, and (3) located on airport property.
- Vessels. However, if a possible obstructing condition exists, an obstructing vessel caution shall be provided on ANA survey products cautioning that vessels may obstruct at certain

4/15/98 CHANGE 1 FAA No 405

times and that further investigation by the data user regarding maximum vessel height, travel limits, and frequency of passage is advised. This exemption does not apply to vessels that are permanently moored.

- Parked aircraft. The location and maximum elevation of individual parked aircraft cannot be determined and shall not be provided under ANA surveys. This exemption does not apply to aircraft that are permanently parked for display purposes.

#### 6.4. SELECTION

Obstruction selection shall include a representation of objects that penetrated ANA OIS's at the time of the field survey. In addition, certain nonobstructing objects may be required in the first 2,566 feet of the approach area. The special cases that apply to obstructions (see Subsection 6.3) also apply to these required nonobstructing objects.

Required objects/obstructions include:

- Primary Surface (See Figure 3.5)

The highest obstruction on the approach side of the threshold.

In addition, for Category II and Category III approaches, the highest obstruction on each side of the runway centerline and between thresholds shall be determined. This requirement is in effect only when the approach has been specifically identified as a Category II or Category III by appropriate FAA authorities.

- Precision Approach Surfaces (See Figure 3.6 and Fig. 3.7)

The two most penetrating obstructions and the most penetrating man-made obstruction in the first 2,566 feet of an approach area.

The two highest objects that are within the first 2,566 feet of an approach area and also higher than the threshold. These objects may or may not penetrate the approach surface and may be nonobstructing EME points.

The highest obstruction between 2,566 feet and 10,000 feet of an approach area. This area is the first 7,434 feet of the 34:1 slope area.

The highest obstruction in the first 20,000 feet, in the first 30,000 feet, and in the first 40,000 feet of an approach area.

The highest obstruction in the approach area.

- Nonprecision Approach Surface (See Figure 3.4)

#### TO BE DEVELOPED

- Transition Surfaces (See Figure 3.8)

The two highest obstruction in the first 2,566 feet (as measured along the runway centerline or centerline extended) of each transition area.

The highest obstruction in the first 10,000 feet, in the first 20,000 feet, in the first 30,000 feet, and in the first 40,000 feet of the each transition area.

The highest obstruction in each transition area.

- Missed Approach Surface (See Figure 3.9)

The highest obstruction and the most penetrating obstruction on each side of the runway centerline or centerline extended.

Note: obstructions may be EME points for obstructing mobile object areas. (See Figure 3.10)

FAA No. 405 9/1/96

In some cases, strict adherence to the object selection criteria listed above may result in congestion or inadequate obstruction representation. To minimize these situations, the following guidelines shall be followed in object selection:

- If objects that are required in the primary area or first 10,000 feet of an approach area are located within 100 feet of each other, the lower object may be omitted.
- If objects that are required outside the primary or first 10,000 of an approach area are located within 500 feet of each other, the lower object may be omitted. (Note: required primary or approach objects shall not be omitted because of the close proximity of higher objects outside of the primary or approach areas).
- When a required object is omitted because of congestion, a replacement object/objects shall be selected if possible that meets the spacing criteria.
- Occasionally, additional obstruction information may be useful in representing certain obstructing conditions. While rigorous selection criteria is not practical, information useful to obstruction clearing activities should be considered in the selection.

#### 7. PLANIMETRIC DETAIL

Planimetric detail is not required.

#### 8. METEOROLOGICAL APPARATUS

Meteorological apparatus data is not required unless it is selected as a representative obstruction.

#### 9. MISCELLANEOUS

#### AIRPORT REFERENCE POINT

The Airport Reference Point (ARP) shall be computed using the centerline end positions of all usable runways. However, since runways without specially prepared hard surfaces are often not required to be surveyed, the ARP position for these airports shall be approximate. The ARP shall be tagged with the year of the most recent runway end survey used in the ARP computation, such as, "ARP (1995)."

Procedures for computing ARP are presented in Appendix 2.

#### 10. DATA DELIVERY

ANA survey data shall be furnished in the Universal Data Delivery Format (UDDF). The UDDF is described in Appendix 1.

POSITIONS AND/OR ELEVATIONS (SEE TABLE 3.1)
SHALL BE PROVIDED FOR: (1) RUNWAY ENDS,
(2) DISPLACED THRESHOLDS, (3) TOUCHDOWN
ZONES (ELEV ONLY), (4) RUNWAY INTERSECTIONS,
(5) AIRPORT ELEVATION, (6) POINT ABEAM CERTAIN
OFFSET NAVAIDS, AND (7) STOPWAY ENDS.

TOUCHDOWN ZONE ELEVATIONS ARE REQUIRED ONLY FOR SPECIALLY PREPARED HARD SURFACE RUNWAYS WITH A USABLE LANDING LENGTH OF AT LEAST 3,000 FEET.

SEE TEXT AND TABLE 3.1 FOR NON-SPECIALLY PREPARED HARD SURFACE RUNWAY/STOPWAY REOUIREMENTS.

POSITIONS AND ELEVATIONS SHALL ALSO BE PROVIDED FOR SUPPLEMENTAL PROFILE POINTS, SELECTED SO THAT A STRAIGHT LINE BETWEEN ANY TWO ADJACENT PUBLISHED RUNWAY/STOPWAY POINTS WILL BE NO GREATER THAN ONE FOOT FROM THE RUNWAY/STOPWAY SURFACE.

RUNWAYS SHALL BE IDENTIFIED BY THE NUMBER PAINTED ON THE RUNWAY AT THE TIME OF THE FIELD SURVEY. IF A NUMBER IS NOT PAINTED ON THE RUNWAY, THE RUNWAY NUMBER PUBLISHED IN THE "U.S. TERMINAL PROCEDURES" CURRENT AT THE TIME OF THE FIELD SURVEY SHALL BE USED.

OFFSET NAVAID 235.2 235.8 237.4 233.1 233.2 236.0 236.3 DISPLACED POINT ABEAM SUPPLEMENTAL SUPPLEMENTAL **RUNWAY END** THRESHOLD OFFSET NAVAID PROFILE POINT PROFILE POINT INTERSECTION OF SPECIALLY RUNWAY END STOPWAY END AIRPORT ELEVATION PREPARED HARD SURFACE RUNWAYS

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS


9/1/96

**DIMENSIONS ARE IN FEET** 

NOT TO SCALE


#### FIGURE 3.1

RUNWAY NUMBERS AND REQUIRED POINTS FOR SPECIALLY
PREPARED HARD SURFACE RUNWAYS/STOPWAYS
FAA NO. 405

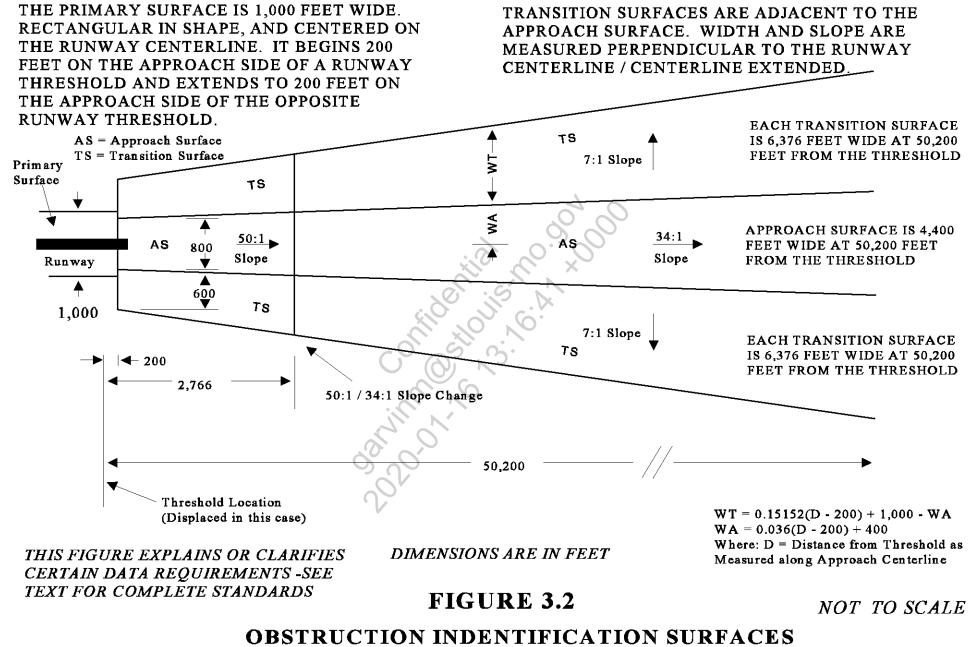

OBSTRUCTION INDENTIFICATION SURFACES PRECISION APPROACH, PRIMARY, AND TRANSITIONS

9/1/96

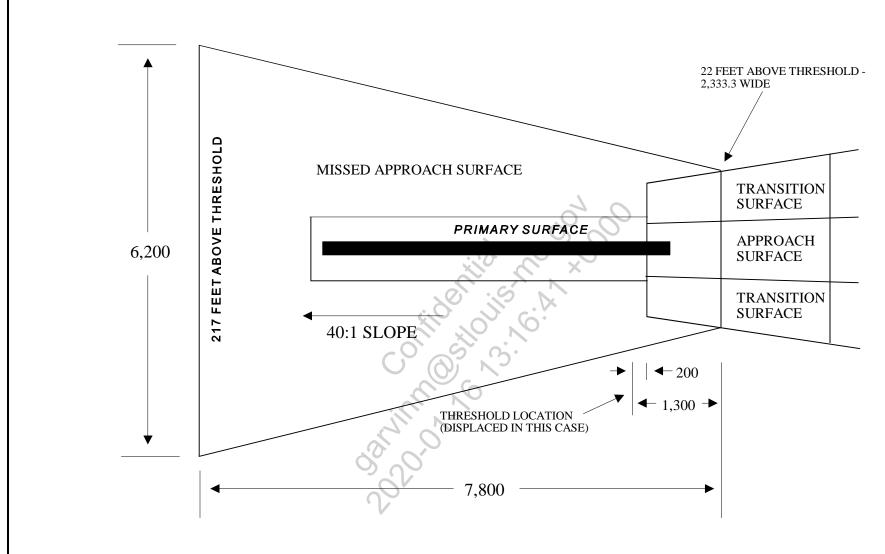

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS **DIMENSIONS ARE IN FEET** 

NOT TO SCALE

#### FIGURE 3.3

# OBSTRUCTION IDENTIFICATION SURFACE MISSED PRECISION APPROACH

TO BE DEVELOPED

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS


FIGURE 3.4

NOT TO SCALE
DIMENSIONS ARE IN FEET

OBSTRUCTION IDENTIFICATION SURFACES NONPRECISION APPROACH

## OBSTRUCTION REPRESENTATION IN THE PRIMARY AREA SHALL INCLUDE THE:

- SEE TEXT WHEN OBJECT/OBSTRUCTION CONGESTION OCCURS.
- A- HIGHEST OBSTRUCTION ON THE APPROACH SIDE OF THE THRESHOLD
- B- HIGHEST OBSTRUCTION ON EACH SIDE OF THE RUNWAY CENTERLINE AND BETWEEN THRESHOLDS. THIS REPRESENTATION IS REQUIRED ONLY FOR CATEGORLY II AND III APPROACHES.

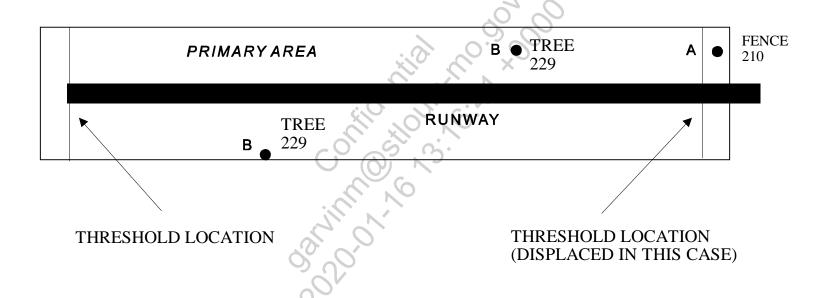

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS

FIGURE 3.5

NOT TO SCALE

DIMENSIONS ARE IN FEET

OBSTRUCTION REPRESENTATION IN THE PRIMARY AREA

4/15/98 CHANGE 1

OBJECT REPRESENTATION IN THE FIRST 2,566 FEET OF A PRECISION APPROACH AREA SHALL INCLUDE THE:

SEE TEXT WHEN OBJECT/OBSTRUCTION CONGESTION OCCURS

- A- MOST PENETRATING OBSTRUCTION
- **B- SECOND MOST PENETRATING OBSTRUCTION**
- C- MOST PENETRATING MAN-MADE OBSTRUCTION
- D- HIGHEST OBJECT ABOVE THE THRESHOLD
- E- SECOND HIGHEST OBJECT ABOVE THE THRESHOLD

NOT REQUIRED - WITHIN

100 FEET OF D

NOT REQUIRED - WITHIN

100 FEET OF A, C

A, C

A, C

PRIMARY SURFACE

NOT REQUIRED - WITHIN

100 FEET OF D

APPROACH SURFACE

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS NOT TO SCALE

#### FIGURE 3.6

# OBSTRUCTION REPRESENTATION IN FIRST 2,566 FEET OF A PRECISION APPROACH AREA


FAA NO. 405

4/15/98 CHANGE 1

## OBSTRUCTION REPRESENTATION IN A PRECISION APPRAOCH AREA SHALL INCLUDE THE:

- A- HIGHEST OBSTRUCTION BETWEEN 2,566 FEET AND 10,000 FEET
- B- HIGHEST OBSTRUCTION IN THE FIRST 20,000 FEET
- C- HIGHEST OBSTRUCTION IN THE FIRST 30,000 FEET
- D- HIGHEST OBSTRUCTION IN THE FIRST 40,000 FEET
- E- HIGHEST OBSTRUCTION IN THE APPROACH AREA

SEE TEXT WHEN OBJECT/OBSTRUCTION CONGESTION OCCURS

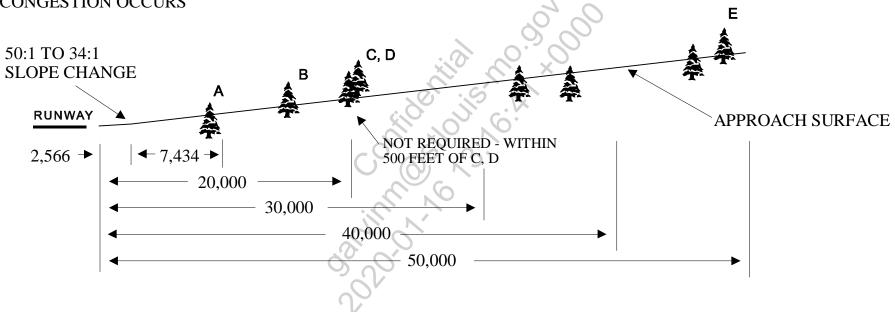

**DIMENSIONS ARE IN FEET** 


THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS -SEE TEXT FOR COMPLETE STANDARDS NOT TO SCALE


#### FIGURE 3.7


# OBSTRUCTION REPRESENTATION IN THE PRECISION APPROACH AREA

FAA NO. 405

9/1/96

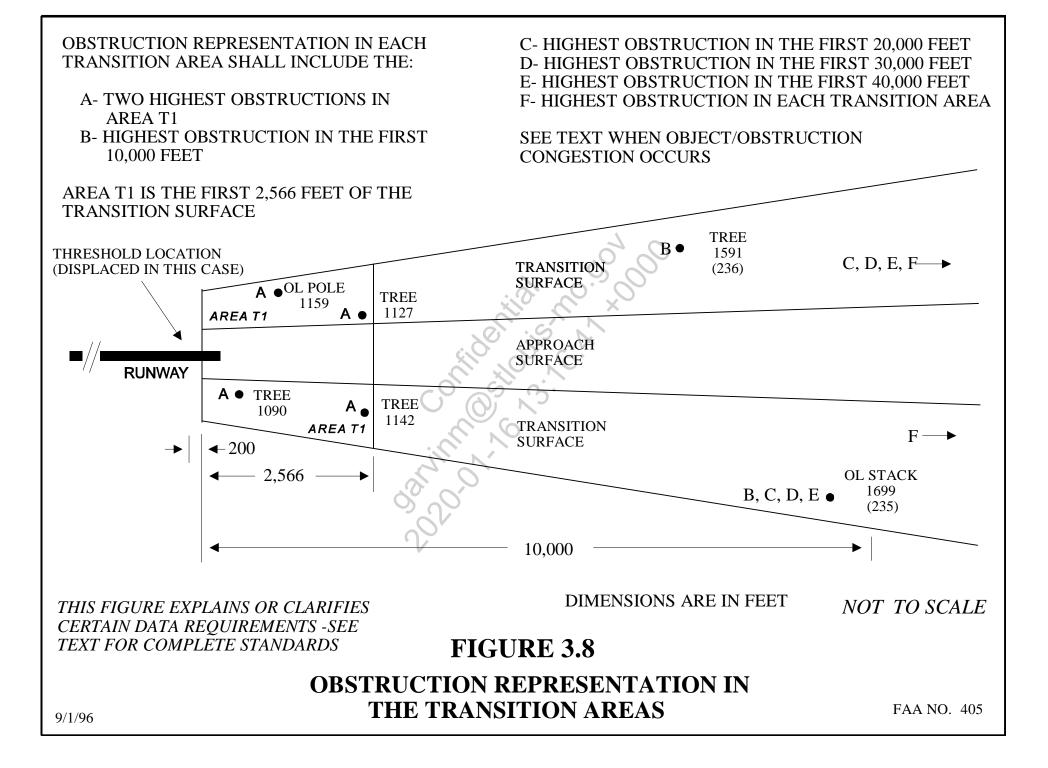

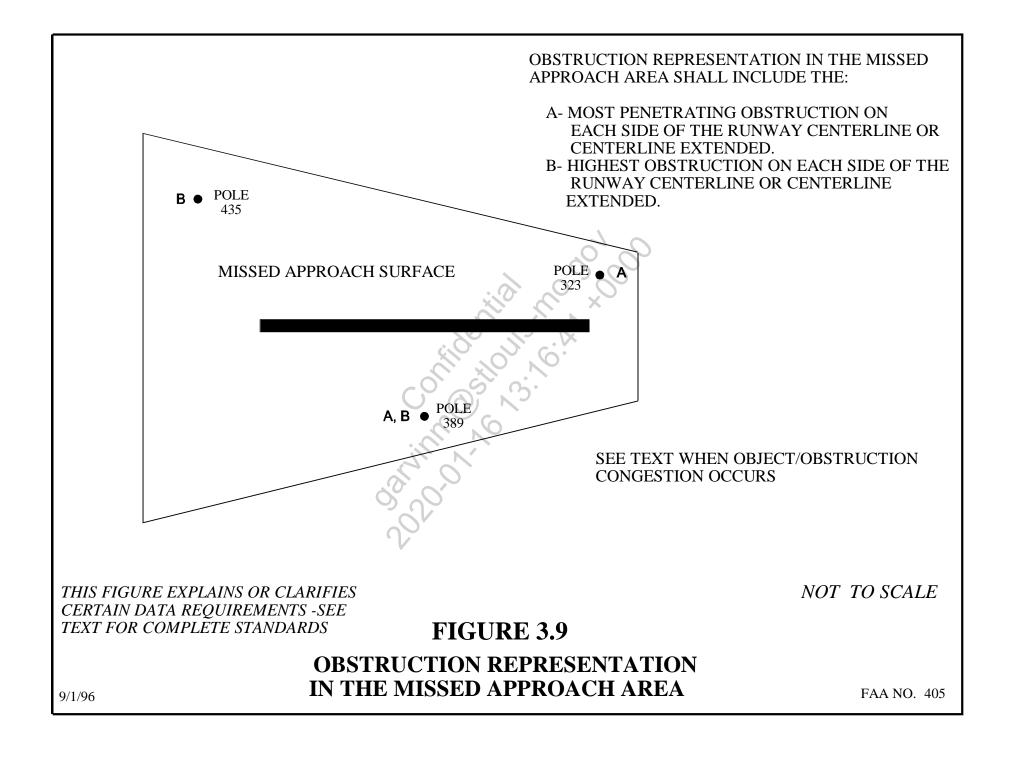

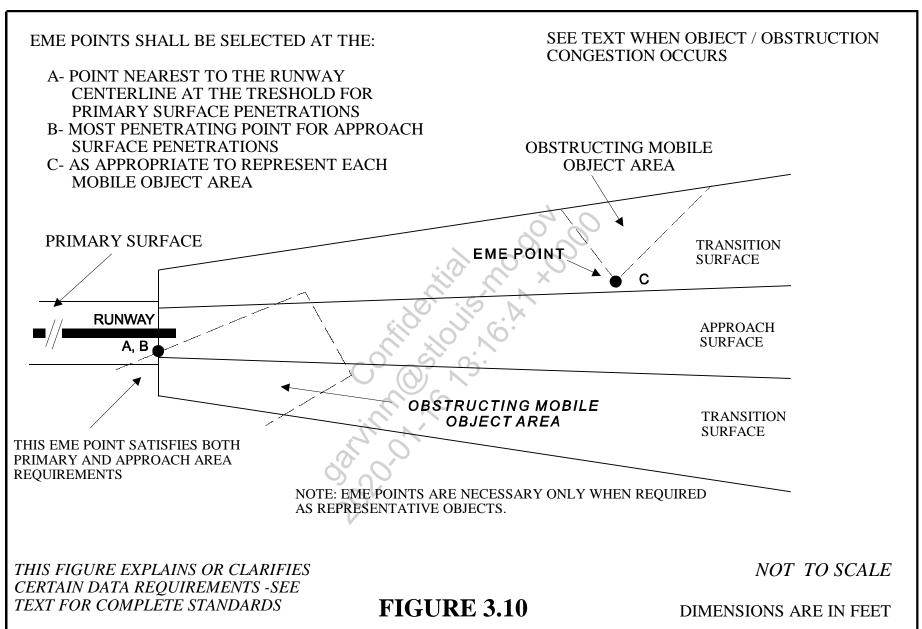

OBSTRUCTING MOBILE OBJECT AREAS AND ESTIMATED MAXIMUM ELEVATION (EME) POINTS

#### **SECTION 4**

# JATION ALLICAL LANDIN SURVEYS AREA NAVIGATION APPROACH (VERTICAL LANDING)

# SECTION 4 TABLE OF CONTENT

# AREA NAVIGATION APPROACH (VERTICAL LANDING) SURVEYS

SUBSECTION	PAGE
1. DESCRIPTION	4.1.
2. DATUM TIE AND LOCAL CONTROL	4.1.
3. ACCURACIES	4.1.
4. HELIPAD REFERENCE POINT	4.1.
5. NAVIGATIONAL AIDS	4.1.
6. OBSTRUCTIONS	4.1.
6.1. DEFINITION	
6.2. OBSTRUCTION SURFACE	4.1.
6.3. SPECIAL CASES	4.2.
6.4. SELECTION	4.2.
7. PLANIMETRIC DETAIL	4.2.
8. METEOROLOGICAL APPARATUS	4.2.
9. MISCELLANEOUS	4.2.
10 DATA DELIVEDY	4.2

# SECTION 4: AREA NAVIGATION APPROACH (VERTICAL LANDING) SURVEYS

#### 1. DESCRIPTION

Area Navigation Approach (ANA) (Vertical Landing) surveys provide data for the Heliport Reference Point (HRP) and associated obstructions to support precision and nonprecision instrument approach procedures development for vertical landing aircraft using area navigation systems, such as, GPS.

# 2. DATUM TIE AND LOCAL CONTROL

To Be Developed

#### 3. ACCURACIES

To Be Developed

#### 4. HELIPORT REFERENCE POINT

To Be Developed

#### 5. NAVIGATIONAL AIDS

To Be Developed

#### 6. OBSTRUCTIONS

#### 6.1. DEFINITION

To Be Developed

### 6.2. OBSTRUCTION IDENTIFICATION SURFACE

See Table 4.1 and Figure 4.1

#### **TABLE 4.1**

#### OBSTRUCTION IDENTIFICATION SURFACE

BEGINS

TO BE DEVELOPED

LENGTH

TO BE DEVELOPED

WIDTH AT BEGINNING

TO BE DEVELOPED

WIDTH AT END

TO BE DEVELOPED

TO BE DEVELOPED

TO BE DEVELOPED

.....

**FAA No. 405** 9/1/96

#### 6.3. SPECIAL CASES

To Be Developed

#### 6.4. SELECTION

To Be Developed

#### 7. PLANIMETRIC DETAIL

To Be Developed

#### 8. METEOROLOGICAL **APPARATUS**

To Be Developed

#### 9. MISCELLANEOUS

To Be Developed

# A DA TA DA TO BE Developed 10. DATA DELIVERY

# TO BE DEVELOPED

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS - SEE TEXT FOR COMPLETE STANDARDS DIMENSIONS ARE IN FEET

NOT TO SCALE

FIGURE 4.1
OBSTRUCTION IDENTIFICATION SURFACES

9/1/96

# SPECIAL PURPOSE SURVEY:

# SECTION 5 TABLE OF CONTENTS

#### SPECIAL PURPOSE SURVEYS

SUBSECTION	PAGE
1. DESCRIPTION	5.1.
2. DATUM TIE AND LOCAL CONTROL	
3. ACCURACIES	5.1.
4. RUNWAY AND STOPWAY POINTS	5.1.
5. NAVIGATIONAL AIDS	5.1.
	5.1.
7. PLANIMETRIC DETAIL	5.1.
8. METEOROLOGICAL APPARATUS	
9. MISCELLANEOUS	5.1.
:'()' ~ /	5.1.

#### **SECTION 5: SPECIAL PURPOSE SURVEYS**

#### 1. DESCRIPTION

Special Purpose (SP) surveys provide selected data on an "as requested" basis. They typically furnish navigational aid (NAVAID) and runway information to support instrument approach procedure development. These surveys, which may be conducted entirely off airport property, are usually limited in extent with the particular survey requirements specified for each project.

# 2. DATUM TIE AND LOCAL CONTROL

Datum tie and local control requirements for all surveys accomplished in accordance with FAA No. 405 standards are identified in Appendix 3.

#### 3. ACCURACIES

Accuracy requirements for all data provided in accordance with FAA No. 405 standards are identified in Appendix 5.

#### 4. RUNWAY AND STOPWAY POINTS

Runway/stopway data requirements will be identified in individual project instructions.

#### 5. NAVIGATIONAL AIDS

Navigational aid requirements will be identified in individual project instructions.

#### 6. OBSTRUCTIONS

Obstruction requirements will be identified in individual project instructions.

#### 7. PLANIMETRIC DETAIL

Planimetric detail requirements will be identified in individual project instructions.

#### 8. METEOROLOGICAL APPARATUS

Meteorological apparatus requirements will be identified in individual project instructions.

#### 9. MISCELLANEOUS

Miscellaneous data requirements will be identified in individual project instructions.

#### 10. DATA DELIVERY

SP survey data will be delivered in formats appropriate to the individual survey data and user requirements.

# **SECTION 6**

JI SURVE

# SECTION 6 TABLE OF CONTENTS

#### AIRPORT LAYOUT SURVEYS

SUBSECTION	PAGE
1. DESCRIPTION	6.1.
2. DATUM TIE AND LOCAL CONTROL	6.1.
3. ACCURACIES	6.1.
4. RUNWAY POINTS	6.1.
5. NAVIGATIONAL AIDS	6.1.
6. OBSTRUCTIONS	6.1.
7. PLANIMETRIC DETAIL	
8. METEOROLOGICAL APPARATUS	6.1.
9. MISCELLANEOUS	6.1.
10. DATA DELIVERY	6.1.

#### **SECTION 6: AIRPORT LAYOUT SURVEYS**

#### 1. DESCRIPTION

Airport Layout (AL) surveys provide detailed runway, taxiway, and apron information in a digital format for use in safely guiding taxiing aircraft, especially in poor visibility conditions. These data can be converted to an Airport Surface Detection Equipment (ASDE) radar overlay allowing air traffic controllers to monitor and direct ground traffic, or to a moving map display in a GPS equipped aircraft cockpit to provide the crew with taxi guidance.

AL surveys also establish (if it does not exist) geodetic control in the airport vicinity consisting of permanent survey marks accurately connected to the National Spatial Reference System (NSRS). This control and the NSRS connection assures accurate relativity between surveyed points on the airport and between these points and other surveyed points in the National Airspace System (NAS), including the navigation satellites. In addition, this control supports not only AL surveys, but also future engineering activities, such as, runway/taxiway construction, NAVAID siting, obstruction clearing, road building, and other airport improvement projects.

# 2. DATUM TIE AND LOCAL CONTROL

Datum tie and local control requirements for all surveys accomplished in accordance with FAA No. 405 standards are identified in Appendix 3.

#### 3. ACCURACIES

Accuracy requirements for all data provided in accordance with FAA No. 405 standards are identified in Appendix 5.

#### 4. RUNWAY POINTS

To Be Developed

#### 5. NAVIGATIONAL AIDS

To Be Developed

#### 6. OBSTRUCTIONS

To Be Developed

#### 7. PLANIMETRIC DETAIL

To Be Developed

# 8. METEOROLOGICAL APPARATUS

To Be Developed

#### 9. MISCELLANEOUS

To Be Developed

#### 10. DATA DELIVERY

To Be Developed

#### **SECTION 7**

# Saring Signature of the second WIDE AREA AUGMENTATION SYSTEM SURVEYS

# SECTION 7 TABLE OF CONTENTS

#### WIDE AREA AUGMENTATION SYSTEM SURVEYS

SUBSECTION	PAGE
1. DESCRIPTION	7.1.
2. DATUM TIE AND LOCAL CONTROL	7.1.
3. ACCURACIES	7.1.
4. RUNWAY POINTS	7.1.
5. NAVIGATIONAL AIDS	7.1.
6. OBSTRUCTIONS	7.1.
7. PLANIMETRIC DETAIL	7.1.
8. METEOROLOGICAL APPARATUS	7.1.
9. MISCELLANEOUS	7.1.
10. DATA DELIVERY	7.1.

### SECTION 7: WIDE AREA AUGMENTATION SYSTEM SURVEYS

### 1. DESCRIPTION

Wide Area Augmentation System (WAAS) surveys establish two permanent survey marks (PSM) at FAA WAAS sites and determine accurate positions and elevations for these marks. These PSM's provide initial geodetic control for WAAS implementation and later serve as permanent geodetic references.

The WAAS is a network of continuously operated, accurately located, GPS receivers and the associated data links which supply critical GPS data to aircraft, thereby enhancing navigation accuracy and integrity.

### 2. DATUM TIE AND LOCAL CONTROL

Datum tie and local control requirements for all surveys accomplished in accordance with FAA No. 405 standards are identified in Appendix 3.

### 3. ACCURACIES

Accuracy requirements for all data provided in accordance with FAA No. 405 specifications are identified in Appendix 5.

### 4. RUNWAY POINTS

Runway data is not required.

### 5. NAVIGATIONAL AIDS

Navigational aid data is not required.

### 6. OBSTRUCTIONS

Obstruction data is not required.

### 7. PLANIMETRIC DETAIL

Planimetric detail is not required.

### 8. METEOROLOGICAL APPARATUS

Meteorological apparatus is not required.

### 9. MISCELLANEOUS

None

### 10. DATA DELIVERY

WAAS data will be delivered in formal, hard copy reports.

### **SECTION 8**

A OGRAPHY Saving Continues of the Contin

### SECTION 8 TABLE OF CONTENTS

### **AERIAL PHOTOGRAPHY**

SUBSECTION	PAGE
1. DESCRIPTION	8.1.
2. EQUIPMENT AND MATERIALS	
2.1. CAMERA	8.1.
2.2. FILM	8.1.
3. FLYING HEIGHT	8.1.
4. WEATHER, SOLAR ALTITUDE, AND TIME OF YEAR	8.1.
5. NAVIGATION	
6. TILT	8.2.
7. CRAB	8.2.
8. OVERLAP AND SIDELAP	8.2.
9. PHOTOGRAPH LABELING	8.2.
10. FILM PROCESSING	8.2.
11 IMAGE OHALITY	83

### **SECTION 8: AERIAL PHOTOGRAPHY**

### 1. DESCRIPTION

Aerial photographs are acquired to support several aeronautical surveys, including the Airport Obstruction Chart (AOC), Area Navigation Approach, and Airport Layout surveys. Contact scale, film type, and other parameters may vary depending on the specific application. When changes from these standards are necessary, the change will be specified in individual project instructions.

### 2. EQUIPMENT AND MATERIALS

### **2.1. CAMERA**

The aerial camera shall meet the following specifications:

- Single lens metric camera with quality equivalent to or better than a Wild RC8 or Zeiss RMK-A 15/23
- 9 inch x 9 inch format
- Between-the-lens, variable speed shutter
  - Six inch (153  $\pm$ 3 mm) focal length lens having a usable angular field not less than 90 degrees.
  - Minimum resolution of 15 lines/mm with an Area Weighted Average Resolution (AWAR) not less than 55 lines/mm. Tangential distortion shall not exceed 0.010 mm and radial distortion shall not exceed 0.030 mm.
  - Equipped with a vacuum or pressure devise for holding film flat against a platen at the instant of exposure. Platen departure from a true plane shall not exceed 0.0005 inch.

- Record on each exposure at least 8 fiducial marks. Fiducial marks shall be located in each corner of the format and at the center of each side.
- Record on each exposure a clock displaying correct coordinated universal time.
- Record on each exposure the lens identification number and focal length.
- Recording a level bubble on each exposure is desirable but not required.

In addition to the specific camera requirements, a certificate of calibration, no older than three years, shall be maintained. Any disturbance of the camera that will affect its calibration automatically voids the calibration certificate.

### 2.2. FILM

Film shall be Kodak Plus X 2402, Aerographic AGFA Pan 150 PE, or equivalent. The use of "equivalent" films require prior approval by appropriate FAA officials. Film shall be shipped and handled in accordance with the manufacturers recommendations.

### 3. FLYING HEIGHT

Flying height shall vary depending on the application. Flying height variation shall not exceed 2 percent of the target height.

### 4. WEATHER, SOLAR ALTITUDE, AND TIME OF YEAR

No clouds or cloud shadows shall appear on the photographs. Overcast shall be permitted above the

flying altitude if it does not cause ground mottling or a discernable reduction in ground object shadows. Sun angle shall not be less than 30 degrees above the horizon.

Photography shall be obtained at a time of year when trees are in full foliage.

### 5. NAVIGATION

Flight line deviation from its target ground track shall not exceed X, where X = flying height in feet/20.

Flight lines may be patched. The patched portion shall be flown in the same nominal direction and under similar physical conditions as the original line.

### 6. TILT

Tilt shall not exceed four (4) degrees for any photographic frame and shall average not more than two (2) degrees for any ten (10) consecutive frames. The average tilt for the entire project shall not exceed one (1) degree. Relative tilt exceeding six (6) degrees between any two successive frames may be cause for rejecting that portion of the flight line.

### 7. CRAB

Crab angle as measured from the average line of flight shall not exceed five (5) degrees. The course heading differential between any two successive exposures shall not exceed five (5) degrees.

### 8. OVERLAP AND SIDELAP

Forward overlap shall be 60 percent  $\pm$  5 percent between consecutive exposures. The average sidelap (overlap of parallel strips of vertical photographs) shall be 30 percent  $\pm$  10 percent. Any frame having sidelap less than 20 percent or more than 40 percent may be rejected.

### 9. PHOTOGRAPH LABELING

Each usable frame shall be titled within the image area between 1/16 inch and 1/4 inch from the format border using machine lettering approximately 1/5 inch high. Each title shall consist of the agency's initials ("NOS" for National Ocean Service), date of photography, camera identifier ("X" shall be used to indicate a contractor's camera), film type ("P" for panchromatic), lens serial number, and exposure number.

Example: NOS 06-23-90 XP UAG332 No 1501

The title may be along any edge of the frame but the preferred location is along the leading edge. The location shall be consistent for all photographs under this contract.

For each lens system used, usable exposures shall be numbered in an unbroken sequence starting at 0001 for the first exposure and continuing through the last exposure by that lens system. The numbering sequence shall not be broken even though more than one airport is photographed, more than one roll of film is used, or the film is spliced.

If splicing is performed, tape residue, finger prints, and other blemishes from the splicing shall be avoided.

Blanks and other unusable exposures shall not be included in the exposure numbering sequence and shall not be labeled.

Film exposed by different lens systems shall not be spliced onto the same roll.

### 10. FILM PROCESSING

Original film negative shall be processed to a gamma of  $0.95 \pm 0.05$  for Kodak Plus X 2402 and  $1.25 \pm 0.05$  for AGFA Pan 150 PE. Base fog density for both films shall not exceed 0.10 with a minimum density above base fog of 0.30 and a maximum density above base fog of 1.35. Processing of "equivalent" films shall be in accordance with the Chief, Photogrammetry Branch, National Geodetic Survey.

A standard reference sensitometric step wedge shall be exposed near the beginning of each film roll.

### 11. IMAGE QUALITY

Image quality on the original negative film and on all copies shall meet the highest professional standards. Dark areas shall not bleed together and individual objects shall be readily discernable. Detail shall be

sufficiently sharp to allow photogrammetric measurement of tree heights, compilation of runway/taxiway edges and other fine map features, and accomplishment of other intended uses for the film. Photographic products shall also be free of blemishes, scratches, tears, and irregularities.



### ANDIX 1 A DELIVER (UDDF) UNIVERSAL DATA DELIVERY FORMAT

### APPENDIX 1: UNIVERSAL DATA DELIVERY FORMAT (UDDF)

The Universal Data delivery Format (UDDF) is a digital delivery system which provides airport, runway, navigational aid, obstruction, and additional information in a standard ASCII format. This information can be easily down loaded into user data files and data bases.

UDDF files are organized into the following five sections::

### -Airport Data

Furnishes airport location identifier and site number, FAA region, airport name and associated city and state, survey datums, magnetic declination, and other airport related information.

### -Runway Data

Furnishes runway, stopway, and blast pad information.

### -Navigational Aid Data

Furnishes navigational aid information, including computed distances between NAVAIDS and selected runway points.

### -Obstruction data

Furnishes obstruction information, including computed distances from, and heights above selected runway points.

### -Additional Information

Furnishes miscellaneous information that cannot be logically included with the other data, such as, "nice to know" and special information that concerns the airport or an individual UDDF file.

UDDF information, including a complete documentation and access instructions, can be obtained by calling the National Geodetic Survey Information Branch at 301-713-3242 or by accessing the following Internet address:

http://www.ngs.noaa.gov/AERO/aero.html

### **APPENDIX 2**

### AIRPORT REFERENCE POINT COMPUTATION

4/15/98 CHANGE 1 FAA No. 405

### APPENDIX 2: AIRPORT REFERENCE POINT COMPUTATION

\_\_\_\_\_

The Airport Reference Point (ARP) is the approximate geometric center of all usable runways. The ARP position computation is somewhat similar to a center of mass computation, except that only two dimensions are considered.

The datums used in the computations are normally selected as the lowest absolute value latitude and longitude coordinates, respectively, of all runway ends used in the computation. This convention eliminates computing with negative moments.

ARP<sub>LAT</sub> = LATITUDE DATUM + (SUM OF RUNWAY MOMENTS ABOUT THE LATITUDE DATUM/SUM OF RUNWAY LENGTHS)

ARP<sub>LON</sub> = LONGITUDE DATUM + (SUM OF RUNWAY MOMENTS ABOUT THE LONGITUDE DATUM/SUM OF RUNWAY LENGTHS)

RUNWAY MOMENT ABOUT THE LATITUDE DATUM = RUNWAY GROUND LENGTH TIMES THE DISTANCE IN SECONDS BETWEEN THE APPROXIMATE RUNWAY CENTER POINT\* AND THE LATITUDE DATUM

RUNWAY MOMENT ABOUT THE LONGITUDE DATUM = RUNWAY GROUND LENGTH TIMES THE DISTANCE IN SECONDS BETWEEN THE APPROXIMATE RUNWAY CENTER POINT\* AND THE LONGITUDE DATUM

RUNWAY COORDINATES MUST BE ENTERED AS ABSOLUTE VALUES.

RUNWAY LENGTHS MUST BE ENTERED AS GROUND LENGTH, ROUNDED TO THE NEAREST WHOLE FOOT.

\* THE APPROXIMATE RUNWAY CENTER POINT IS THE MEAN OF THE LATITUDES AND LONGITUDES OF A RUNWAY'S ENDS. THIS CONVENTION ELIMINATES THE NEED FOR COMPLEX GEODETIC FORMULAS TO COMPUTE THE PRECISE RUNWAY CENTER POINT, THUS ALLOWING SIMPLE AND CONSISTENT ARP COMPUTATIONS AFTER ONLY BRIEF INSTRUCTIONS.

A SAMPLE ARP COMPUTATION FOLLOWS (SEE FIGURE A2.1):

APPROXIMATE RUNWAY CENTER PTS:

RWY 1/19 LAT = 39 24 57.7852 LON = 77 22 41.1951 RWY 5/23 LAT = 39 24 48.4806 LON = 77 22 34.9130

 $ARP_{LAT} = 39\ 24\ 34.1979 + (4,000\ FT(23.5873\ SEC) + 3,799\ FT(14.2827\ SEC))/7,799\ FT$ 


= 39 24 34.1979 + 19.0549 SEC

= 392453.3

 $ARP_{LON} = 77 22 19.1959 + (4,000 FT(21.9992 SEC) + 3,799 FT(15.7171 SEC))/7,799 FT$ 

= 77 22 19.1959 + 18.9391 SEC

= 77 22 38.1

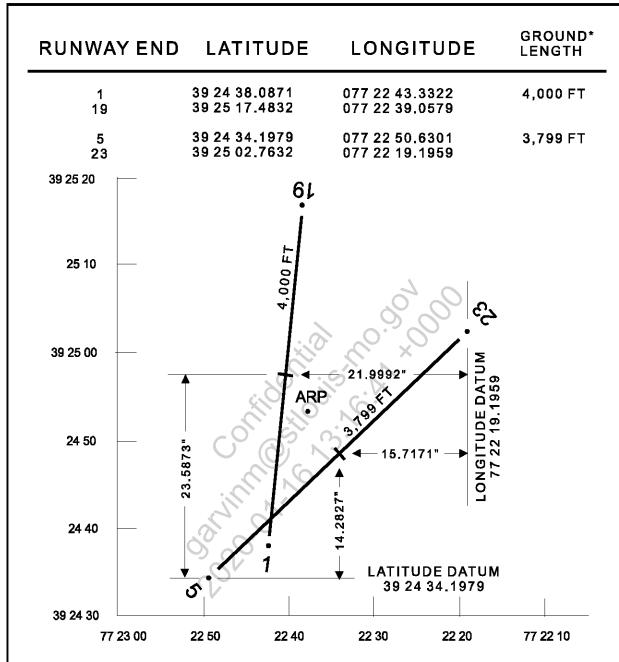

\* USE GROUND, NOT GEODETIC, RUNWAY LENGTH ROUNDED TO THE NEAREST WHOLE FOOT

THIS FIGURE EXPLAINS OR CLARIFIES CERTAIN DATA REQUIREMENTS - SEE TEXT FOR COMPLETE STANDARDS

NOT TO SCALE

FIGURE A2.1
AIRPORT REFERENCE POINT
COMPUTATION

4/15/98 CHANGE 1

**FAA NO.405** 

# DATUM TIE AND LOCAL CONTROL

### APPENDIX 3 TABLE OF CONTENTS

### DATUM TIE AND LOCAL CONTROL

SECTION	PAGE
1. GENERAL	A3.1.
1.1. TERMINOLOGY	A3.1.
1.2. DATUMS	A3.1.
1.3. MARK STAMPING	A3.1.
1.4. ACCURACIES	A3.1.
2. AIRPORT SURVEYS	A3.2.
2.1. GENERAL	A3.2.
2.2. CONTROL STATION SITING	A3.2.
2.3. CONTROL STATION CONSTRUCTION	A3.2.
3. HELIPORT SURVEYS	A3.3.
3.1. GENERAL	A3.3.
3.2. CONTROL STATION SITING	A3.3.
3.3. CONTROL STATION CONSTRUCTION	A3.3.
4. WIDE AREA AUGMENTATION SYSTEM SURVEYS	A3.3.
4.1. GENERAL	A3.3.
4.2. CONTROL STATION SITING	A3.3
4.3. CONTROL STATION CONSTRUCTION	
5. SPECIAL PURPOSE SURVEYS	

### APPENDIX 3: DATUM TIE AND LOCAL CONTROL

### 1. GENERAL

### 1.1. TERMINOLOGY

As used in this appendix, the term "observation" means the survey observations that result in a position and/or elevation for the survey mark in question, whether the mark is an existing mark or a newly set mark. The term "set" means physically constructed. A mark may be set at one time and be observed for position and/or elevation at a later time.

### 1.2. DATUMS

Surveys accomplished in accordance with FAA No. 405 standards shall be tied to the National Spatial Reference System (NSRS). Positions and ellipsoid heights shall be referenced to the North American Datum of 1983 (NAD 83) which is operationally equivalent to, and may be used as, World Geodetic System of 1984 (WGS 84) values for charting and navigation purposes. Orthometric heights (MSL elevations) shall be referenced to the North American Vertical Datum of 1988 (NAVD 88).

### 1.3. MARK STAMPING

Reference stations set at Wide Area Augmentation System sites, Heliport Reference Points set at Area Navigation Approach - Vertical Landing sites, and Primary Airport Control Stations and Secondary Airport Control Stations set at airports shall have unique stampings.

Marks set at a site without an FAA site identifier shall be stamped with a name that characterizes the mark location plus the year the mark was set, such as, "KNOLL 1994".

Marks set at a site with an official FAA site identifier shall be stamped with that identifier, followed by a sequential letter, followed by the year the mark was set. The sequential letter shall be assigned in the chronological order that the mark was set. For example, the first mark set at the Boston Air Route Traffic Control Center at Nashua, New Hampshire, during the 1994 survey would be stamped "ZBW A 1994". The second mark set in 1994 would be "ZBW B 1994".

If marks using this stamping convention already exist, the sequential letter for the next mark should use the next letter after the existing letters. For example, if "K78 B 1995" already exist, the next mark set in 1995 would be stamped "K78 C 1995". If this next mark was set in 1996, it would be stamped "K78 C 1996".

If a previously set mark used a letter in another stamping convention, such as, "AP STA A 1984", the next mark would be stamped disregarding the existing "A". A stamping of "K78 A 1995" for the next mark set at this airport would be appropriate.

Stampings of destroyed or presumed destroyed marks shall not be reused.

Previous stampings will never be changed or added to, even if the FAA site identifier changes.

All letters shall be capitals.

### 1.4. ACCURACIES

Accuracy requirements for all data provided in accordance with FAA No. 405 standards are listed in Appendix 5.

### 2. AIRPORT SURVEYS

### 2.1. GENERAL

Surveys included under this section are surveys accomplished on, or in the vicinity of, an airport and specifically intended to support aircraft operations at that airport. These surveys include: Airport Obstruction Chart (AOC); Area Navigation Approach (ANA) - Conventional Landing; and Airport Layout (AL). Requirements for Special Purpose surveys are identified in Section 5 of this appendix.

Three permanent survey marks (PSM) shall be established on, or within one km of, the airport. One of these marks shall be designated the Primary Airport Control Station (PACS). Horizontal and vertical datum ties shall be made directly between the PACS and the NSRS. The other two marks shall be designated Secondary Airport Control Stations (SACS). Horizontal and vertical connections shall be made directly between the SACS and the PACS.

Existing stations may be used as the PACS and SACS if they meet the accuracy, siting, construction, and other criteria identified in this appendix and Appendix 5.

### 2.2. CONTROL STATION SITING

PACS shall be established in a secure area on airport property. A GPS suitable site should be selected where surveying equipment may be left unattended at the mark with a minimum probability of disturbance.

SACS should be established on airport property if practical. However, if the siting requirements, such as, intervisibility and spacing as described below, cannot be met, one SACS may be set off the airport but no further than 1 km from the nearest airport boundary.

If establishing the PACS and SACS requires new monumentation, the new monuments should be set no closer than 60 meters from a runway edge, if practical.

If an existing control station is used, this station should be at least 15 meters from a runway edge. In all cases, PACS and/or SACS should be at least 400 meters apart.

PACS and SACS should be located so that a surveying tripod can be situated over the mark. In addition, if the mark could be in peril from snow removal, mowing, and other operations, it should be slightly recessed.

PACS and SACS should be strategically located so as to provide maximum use for subsequent surveys yet situated where the chances of future disturbance will be minimal. An elevated site with runway end visibility is desirable. PACS and SACS should also be located where future station occupation will cause no interference to or from aircraft, including from prop and jet blast. The sight path between stations over paved areas should be minimized.

Intervisibility choices for PACS and SACS are:

### FIRST CHOICE

The PACS and both SACS are all intervisible with each other.

### SECOND CHOICE

The PACS is intervisible with both SACS but the SACS are not intervisible with each other.

### THIRD CHOICE

The PACS is intervisible with one SACS and both SACS are intervisible with each other.

### 2.3. CONTROL STATION CONSTRUCTION

PACS and SACS construction shall meet mark stability standards as defined by the National Geodetic Survey, National Oceanic and Atmospheric Administration, for Federal Base Network stations.

### - PACS

Stability "A" or "B." In addition, stability "C" is acceptable if, and only if, the monument: (1) already exists, (2) is poured in place concrete, (3) is a triangulation station, reference mark, azimuth mark, or bench mark stamped "U.S. Coast and Geodetic Survey", or any mark stamped "National Geodetic Survey", (4) is set below the frost line, (5) is set in nonexpansive soils, and (6) shows no evidence of movement.

- SACS

Stability "A," "B," or "C."

### 3. HELIPORT SURVEYS

### 3.1. GENERAL

Surveys included under this section are all surveys accomplished on, or in the vicinity of, heliports and specifically intended to support aircraft operations at that heliport. These surveys include the Area Navigation Approach (ANA) - Vertical Landing surveys.

### 3.2. CONTROL STATION SITING

To Be Developed

### 3.3. CONTROL STATION CONSTRUCTION

To Be Developed

### 4. WIDE AREA AUGMENTATION SYSTEM SURVEYS

### 4.1. GENERAL

Surveys included under this section are all surveys specifically intended to support the Wide Area Augmentation System. Two PSM's shall be

established at each WAAS site. These marks are called WAAS reference stations. Horizontal and vertical datums ties shall be made directly between NSRS and one of the reference stations. To ensure the required relative accuracy between the two reference stations, direct horizontal and vertical ties shall be made between the two stations.

Existing marks may be used as the WAAS reference stations if they meet the accuracy, siting, construction, and other criteria identified in this appendix and Appendix 5.

### 4.2. CONTROL STATION SITING

While there are no separation or intervisibility requirements for WAAS reference stations, other siting guidelines apply. If practical, one station should be established in a secure area and the other established in a public access area. Neither station should be further than 1 km from the WAAS antenna site. They should be established where the chances of future disturbance will be minimal and be sufficiently separated to reduce the probability that both marks would be destroyed by the same construction project.

In addition, both stations should be located where they have maximum practical sky visibility above 15 degrees above the horizon.

### 4.3. CONTROL STATION CONSTRUCTION

WAAS reference station construction shall meet mark stability "A" or "B" standards as defined by the National Geodetic Survey, National Oceanic and Atmospheric Administration, for Federal Base Network stations.

### 5. SPECIAL PURPOSE SURVEYS

Special Purpose (SP) surveys provide selected data on an "as requested" basis. They typically furnish navigational aid (NAVAID) and runway information to

support instrument approach procedure development. These surveys, which may be conducted entirely off airport property, are usually limited in extent, with the particular survey requirements specified for each project.

The datum ties for SP surveys shall be in accordance with Section 1.2. of this appendix. Control station requirements, including mark stamping, siting, and construction will be specified for each project.



# NAVIGATIONAL AID SURVEY POINTS

### **APPENDIX 4: NAVIGATIONAL AID SURVEY POINTS**

NAVAID	HORZ SURVEY POINT (HSP)	VERT SURVEY POINT (VSP)
AIR ROUTE SURVEILLANCE RADAR (ARSR)	(1)	(2)
AIRPORT SURVEILLANCE RADAR (ASR)	(1)	(2)
DISTANCE MEASURING EQUIPMENT (DME) (3)	CENTER OF ANTENNA COVER	CENTER OF ANTENNA COVER
LOCALIZER (LOC) (4)	CENTER OF ANTENNA SUPPORTING STRUCTURE	(2)
GLIDE SLOPE - ALL EXCEPT END FIRE TYPE (GS)	CENTER OF ANTENNA SUPPORTING STRUCTURE	(2)
GLIDE SLOPE - END FIRE TYPE (GS)	PHASE CENTER REFERENCE POINT	PHASE CENTER REFERENCE PT.
INNER MARKER (IM)  MIDDLE MARKER (MM)	CENTER OF ANTENNA ARRAY	N/A
MIDDLE MARKER (MM)	CENTER OF ANTENNA ARRAY	N/A
OUTER MARKER (OM)	CENTER OF ANTENNA ARRAY	N/A
BACK COURSE MARKER (BCM)	CENTER OF ANTENNA ARRAY	N/A
FAN MARKER (FM)	CENTER OF ANTENNA ARRAY	N/A
LOCALIZER TYPE DIRECTIONAL AID (LDA)	CENTER OF ANTENNA SUPPORTING STRUCTURE	(2)
MLS AZIMUTH GUIDANCE (MLSAZ)	PHASE CENTER REFERENCE POINT	PHASE CENTER REFERENCE PT.

### NAVIGATIONAL AID SURVEY POINTS CONT.

NAVAID	HORZ SURVEY POINT (HSP)	VERT SURVEY POINT (VSP)
MLS ELEVATION GUIDANCE (MLSEL)	PHASE CENTER REFERENCE POINT	PHASE CENTER REFERENCE PT.
NONDIRECTIONAL BEACON (NDB)	CENTER OF ANTENNA ARRAY	N/A
SIMPLIFIED DIRECTIONAL FACILITY (SFD)	CENTER OF ANTENNA SUPPORTING STRUCTURE	(2)
TACTICAL AIR NAVIGATION (TACAN)	CENTER OF ANTENNA COVER	(2)
VHF OMNI DIRECTIONAL RANGE (VOR)	CENTER OF ANTENNA COVER	(2)
VOR/ TACAN (VORTAC)	CENTER OF ANTENNA COVER	(2)

### EXPLANATION OF CODE NUMBERS IN PARENTHESIS

- (1) The HSP will be the axis of antenna rotation if possible. If the antenna is covered, the HSP will be the center of the antenna cover.
- (2) The VSP for these items will be the intersection of the ground, gravel, concrete pad, or other base and a plumb line through the HSP. When access to this point is impractical, elevation of the VSP will be approximated.
- (3) DME elevations are required only when the DME is frequency paired with an Instrument Landing System or Microwave Landing System.
- (4) When LOC clearance and course array antennas are both present, only the course array antenna will be surveyed.

NOTE: A compass locator within 50 feet of an Instrument Landing System marker is considered collocated at the position of the marker. Other NAVAIDS are not considered collocated unless their HSP's are the same.

### **APPENDIX 5**

### ACCURACIES CONTROL OF THE PROPERTY OF THE PROP

### APPENDIX 5 TABLE OF CONTENTS

### **ACCURACIES**

SUBSECTION	PAGE
1. GENERAL	A5.1.
2. DIGITAL ACCURACIES	A5.1.
2.1. CONTROL STATIONS	A5.2.
2.2. HELIPORT REFERENCE POINT	A5.2.
2.3. METEOROLOGICAL APPARATUS	A5.3.
2.4. MISCELLANEOUS	A5.3.
2.5. NAVIGATIONAL AIDS	A5.4.
2.6. OBSTRUCTIONS	A5.6.
2.7. RUNWAY/STOPWAY POINTS	A5.10.
2.8. SPECIAL PURPOSE SURVEYS	A5.11.
3. GRAPHIC ACCURACIES	A5.11.
3.1. AIRPORT OBSTRUCTION CHART	A5.11.
2.2 MISCELL ANEOLIS	A 5 12

### **APPENDIX 5: ACCURACIES**

### 1. GENERAL

Accuracy standards for data provided under FAA No. 405 are presented in this appendix. Requirements for digital and graphic data are listed separately.

When an object is selected for its obstruction value only (for example, meteorological apparatus), obstruction accuracies apply.

All accuracies are listed in feet except control station accuracies which are listed in centimeters and graphic accuracies which are listed in millimeters on the graphic.

All accuracies are stated for a 95 percent confidence level.

The following contractions are used throughout FAA No. 405 and are repeated here for convenience:

AGL - Above Ground Level

ELLIP - Ellipsoid HORZ - Horizontal

HRP - Heliport Reference Point

ORTHO - Orthometric

PACS - Primary Airport Control Station SACS - Secondary Airport Control Station

### 2. DIGITAL ACCURACIES

Digital data is construed as any data furnished as digits, regardless of the delivery medium. FAA No. 405 digital accuracy standards are presented in the tables that follow.

### 2.1. CONTROL STATIONS

ITEM	(VALUES ARE IN CENTIMETERS)	HORZ	VERT ORTHO	TCAL ELLIP	AGL
	· ,				
PRIMARY A	IRPORT				
CONTROL S	TATION (PACS) <sup>1</sup>	5	25	15	N/A
SECONDAR	Y AIRPORT				
CONTROL S	STATION (SACS) <sup>2</sup>	3	5	4	N/A
WIDE AREA	A AUGMENTATION				
	VAAS) REFERENCE STATION <sup>1</sup>	5	10	10	N/A
WIDE AREA	A AUGMENTATION	0	0		
	VAAS) REFERENCE STATION 3	$\bigcirc$ 1	0.2	2	N/A

ACCURACIES ARE RELATIVE TO THE NEAREST NATIONAL GEODETIC SURVEY SANCTIONED CONTINUOUSLY OPERATING REFERENCE STATION

### 2.2. HELIPORT REFERENCE POINT

		VERTICAL			
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	<b>AGL</b>
HELIPORT I	REFERENCE POINT ACCURACY STAND	ARDS ARE TO	BE DEVELOPI	ED	

A5.2.

<sup>&</sup>lt;sup>2</sup> ACCURACIES ARE RELATIVE TO THE PACS AND OTHER SACS AT THE AIRPORT

<sup>&</sup>lt;sup>3</sup> ACCURACIES ARE RELATIVE TO THE OTHER WAAS REFERENCE STATION AT THE SITE

### 2.3. METEOROLOGICAL APPARATUS

			VERTIC	CAL	
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL

THE HORIZONTAL ACCURACY IS 20 FEET WHEN LOCATED ON A PUBLIC USE AIRPORT OR MILITARY FIELD AND 50 FEET FOR ALL OTHER LOCATIONS. ELEVATIONS ARE NOT REQUIRED.

ACCURACIES ARE RELATIVE TO THE NEAREST PACS, SACS, OR HRP

### 2.4. MISCELLANEOUS

	. 0	VERT			
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
	COLO	5.00.			
AIRPORT REFI	ERENCE POINT	1.00	N/A	N/A	N/A
FLOOR OF CO	NTROL TOWER CAB	N/A	1.00	1.00	N/A
ACCUD ACIES	ADE DEL ATIVE TO THE MEAE	DEST DACS SACS OF	HDD		
ACCURACIES	ARE RELATIVE TO THE NEAR	REST PACS, SACS, OR	пкр		

### 2.5. NAVIGATIONAL AIDS

ITEM	(VALUES ARE IN FEET)	HORZ	VERT ORTHO	ICAL ELLIP	AGL
ELECTRONI	C NAVAIDS				
AIR ROUTE S	SURVEILLANCE RADAR (ARSR)	(1)	100.00	100.00	N/A
AIRPORT SU	RVEILLANCE RADAR (ASR)	(1)	10.00	10.00	N/A
DISTANCE M	IEASURING EQUIPMENT (DME):	4			
FREQUE	NCY PAIRED WITH LOC	1.00	1.00	1.00	N/A
FREQUE	NCY PAIRED WITH MLSAZ	1.00	1.00	1.00	N/A
FREQUE	NCY PAIRED WITH NDB	(1)	N/A	N/A	N/A
FREQUE	NCY PAIRED WITH VOR	(1)	N/A	N/A	N/A
NOT FRE	EQUENCY PAIRED	(1)	N/A	N/A	N/A
FAN MARKE	R (FM)	(1)	N/A	N/A	N/A
LOCALIZER	R (FM) (LOC) E (GS)	1.00	1.00	1.00	N/A
GLIDE SLOPI	E (GS)	1.00	0.25	0.20	N/A
INNER MARI	KER (IM)	20.00	N/A	N/A	N/A
MIDDLE MA	RKER (MM)	20.00	N/A	N/A	N/A
OUTER MAR	KER (OM)	50.00	N/A	N/A	N/A
BACK COUR	SE MARKER (BCM)	50.00	N/A	N/A	N/A
LOCALIZER '	TYPE DIRECTIONAL AID (LDA)	1.00	1.00	1.00	N/A
MLS AZIMUT	TH GUIDANCE (MLSAZ)	1.00	1.00	1.00	N/A
MLS ELEVAT	TION GUIDANCE (MLSEL)	1.00	0.25	0.20	N/A

### 2.5. NAVIGATIONAL AIDS CONT.

			VERT	TCAL	
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
NONDIRECT	ΓΙΟΝΑL BEACON (NDB)	(1)	N/A	N/A	N/A
SIMPLIFIED	DIRECTIONAL FACILITY (SDF)	1.00	1.00	1.00	N/A
TACTICAL A	AIR NAVIGATION (TACAN)	(1)	100.00	100.00	N/A
VHF OMNI I	DIRECTIONAL RANGE (VOR)	(1)	100.00	100.00	N/A
VOR/TACAN	N (VORTAC)	(1)	100.00	100.00	N/A
VISUAL NA	VAIDS	SUN, XO			
AIRPORT BI	EACON	(1)	N/A	N/A	N/A
VISUAL GLI	DESLOPE INDICATORS	20.00	N/A	N/A	N/A
REIL		20.00	N/A	N/A	N/A
APPROACH	LIGHTS	20.00	N/A	N/A	N/A

THE HORIZONTAL ACCURACY REQUIREMENT FOR ITEMS CODED "(1)" IS 20 FEET WHEN LOCATED ON A PUBLIC USE AIRPORT OR MILITARY FIELD, AND 50 FEET FOR ALL OTHER LOCATIONS.

ACCURACIES ARE RELATIVE TO THE NEAREST PACS, SACS, OR HRP.

\_\_\_\_\_

FAA No. 405 4/15/98 CHANGE 1

### 2.6. OBSTRUCTIONS

### AIRPORT OBSTRUCTION CHART SURVEYS

			VERT	CAL	
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
LESS THAN	IADE OBJECTS, AND MAN-MADE OBJECTS 200 FT. AGL, THAT PENETRATE THE GOBSTRUCTION IDENTIFICATION	S			
- A PRIM	IARY SURFACE	20.00	3.00	3.00	N/A
	E AREAS OF AN APPROACH SURFACE 10,200 FEET OF THE RUNWAY END	20.00	3.00	3.00	N/A
	E AREAS OF A PRIMARY TRANSITION E WITHIN 500 FEET OF THE PRIMARY E	20.00	3.00	3.00	N/A
SURFAC THE API	E AREAS OF AN APPROACH TRANSITION TE THAT ARE WITHIN 500 FEET OF PROACH SURFACE AND ALSO WITHIN ET OF THE RUNWAY END	20.00	3.00	3.00	N/A
SURFAC	AREAS OF A PRIMARY TRANSITION E FURTHER THAN 500 FEET FROM THE Y SURFACE	50.00	20.00	20.00	N/A
SURFAC APPROA	AREAS OF AN APPROACH TRANSITION E FURTHER THAN 500 FEET FROM AN ACH SURFACE AND ALSO WITHIN 10,200 F THE RUNWAY END	50.00	20.00	20.00	N/A
- THE HO	ORIZONTAL SURFACE	50.00	20.00	20.00	N/A
	AREAS OF AN APPROACH SURFACE OR THAN 10,200 FEET FROM THE Y END	100.00	50.00	50.00	N/A
	E AREAS OF AN APPROACH TRANSITION TE FURTHER THAN 10,200 FEET FROM THE Y END	E 100.00	50.00	50.00	N/A
- THE CO	ONICAL SURFACE	100.00	50.00	50.00	N/A

### 2.6. OBSTRUCTIONS CONT.

### AIRPORT OBSTRUCTION CHART SURVEYS

		VERTICAL			
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
MAN-MADE	E OBJECTS EQUAL TO OR GREATER THAN	1			
200 FEET A	GL THAT PENETRATE THE FOLLOWING				
OBSTRUCT	ION IDENTIFICATION SURFACES:				
- A PRII	MARY SURFACE	20.00	3.00	3.00	10.00
THO	WE AREAG OF AN ARREST OF	3	0		
	SE AREAS OF AN APPROACH OR	40 ~	5		
	ACH TRANSITION SURFACE		2.00	2.00	10.00
WITHIN	N 10,200 FEET OF THE RUNWAY END	20.00	3.00	3.00	10.00
THE D	RIMARY TRANSITION SURFACE	20.00	3.00	3.00	10.00
- 111121	KIWAKI IKANSIIION SUKI ACL	20.00	3.00	3.00	10.00
- AN AF	PPROACH OR APPROACH TRANSITION	6.			
	CE FURTHER THAN 10,200 FEET FROM				
	JNWAY END	50.00	3.00	3.00	10.00
- THE H	IORIZONTAL SURFACE	50.00	3.00	3.00	10.00
- THE C	CONICAL SURFACE	50.00	3.00	3.00	10.00

ACCURACIES ARE RELATIVE TO THE NEAREST PACS, SACS, OR HRP.

DISTANCES RELATIVE TO THE THRESHOLD OR RUNWAY END ARE MEASURED ALONG THE RUNWAY CENTERLINE OR CENTERLINE EXTENDED TO THE ABEAM POINT.

FAA No. 405 4/15/98 CHANGE 1

### 2.6. OBSTRUCTIONS CONT.

### AREA NAVIGATION APPROACH (CONVENTIONAL LANDING) SURVEYS

		VERTICAL			
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
LESS THAN	MADE OBJECTS, AND MAN-MADE OBJECTS 200 FEET AGL, THAT PENETRATE THE G OBSTRUCTION IDENTIFICATION				
- THE P	RIMARY SURFACE	20.00	3.00	3.00	N/A
	E AREAS OF THE APPROACH SURFACE 10,200 FEET OF THE THRESHOLD	20.00	3.00	3.00	N/A
	E AREAS OF AN APPROACH TRANSITION CE WITHIN 2,766 FEET OF THE THRESHOLD [1]	20.00	3.00	3.00	N/A
SURFAC THRESE	E AREAS OF THE APPROACH TRANSITION CE FURTHER THAN 2,766 FEET FROM THE HOLD BUT NOT MORE THAT 10,200 FEET THE THRESHOLD	50.00	20.00	20.00	N/A
- THE M	ISSED APPROACH SURFACE	50.00	20.00	20.00	N/A
	E AREAS OF THE APPROACH SURFACE ER THAN 10,200 FEET FROM THE HOLD	100.00	50.00	50.00	N/A
	E AREAS OF THE APPROACH TRANSITION CE FURTHER THAN 10,200 FEET FROM THE HOLD	100.00	50.00	50.00	N/A
	OBJECTS EQUAL TO OR GREATER THAN 2 G OBSTRUCTION IDENTIFICATION SURFAC		GL THAT PEN	ETRATE TH	ΙE
APPROA	RIMARY SURFACE, THOSE AREAS OF THE ACH AND TRANSITION SURFACES WITHIN EET OF THE THRESHOLD	20.00	3.00	3.00	10.00
·	ISSED APPROACH SURFACE	20.00	3.00	3.00	10.00

### 2.6. OBSTRUCTIONS CONT.

### AREA NAVIGATION APPROACH (CONVENTIONAL LANDING) SURVEYS

ITEM	(VALUES ARE IN FEET)	HORZ	VERT ORTHO	ICAL ELLIP	AGL
	(VALUES ARE IN FEET)	HOKZ	OKIHO	ELLIF	AGL
TRANSITION	EAS OF THE APPROACH AND N SURFACES FURTHER THAN 10,200 THE THRESHOLD	50.00	3.00	3.00	10.00
ACCURACIE	S ARE RELATIVE TO THE NEAREST PA	CS, SACS, OR I	HRP.		
	RELATIVE TO THE THRESHOLD OR ENTERLINE OR CENTERLINE EXTENDE		)	URED ALO	NG THE
		, , , , , , , , , , , , , , , , , , ,			
AREA NAVI	GATION APPROACH (VERTICAL LAN	DING) SURVE	YS		
			VERT	ΓICAL	
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
ADEA NAVIO	SATION APPROACH (VERTICAL LANDING	C) SLIDVEY ACC		IDADDS AD	E TO DE
DEVELOPED	· ·	J) SURVET ACC	LURAC I STAI	NDARDS AR	E IO BE

### 2.7. RUNWAY/STOPWAY POINTS

		VERTICAL			
ITEM (VALUES AR	E IN FEET)	HORZ	ORTHO	ELLIP	AGL
PHYSICAL END		1.00	0.25	0.20	N/A
DISPLACED THRESHOLD		1.00	0.25	0.20	N/A
THRESHOLD ZONE ELEVATION	(TDZE)	N/A	0.25	0.20	N/A
SUPPLEMENTAL PROFILE POIN	TS	20.00	0.25	0.20	N/A
POINT ABEAM HSP FOR:		9,00	200		
OFFSET LOC, LDA, OR SDF	il	1.00	N/A	N/A	N/A
GS, MLSEL	: 00	1.00	0.25	0.20	N/A
STOPWAY LENGTH	con silo	2.00	N/A	N/A	N/A
STOPWAY END		N/A	0.25	0.20	N/A
AIRPORT ELEVATION		20.00	0.25	0.20	N/A

ACCURACIES ARE RELATIVE TO THE NEAREST PACS, SACS, OR HRP

UNLESS OTHERWISE STATED, ALL RUNWAY/STOPWAY POINTS SHALL BE ON THE RUNWAY/STOPWAY CENTERLINE.

NOTE: RUNWAY POINT ELEVATIONS NEED NOT BE REVISED UNLESS THE ELEVATION HAS CHANGED BY AT LEAST 0.5 FEET.

A5.10.

### 2.8. SPECIAL PURPOSE SURVEYS

		VERTICAL			
ITEM	(VALUES ARE IN FEET)	HORZ	ORTHO	ELLIP	AGL
		<del> </del>			
SPECIAL SURVEY.	PURPOSE SURVEY ACCURACY STANDAR	DS SHALL BI	E IDENTIFIED	FOR THE S	PECIFIC

### 3. GRAPHIC ACCURACIES

### 3.1. AIRPORT OBSTRUCTION CHART

THESE ACCURACY STANDARDS APPLY TO WELL DEFINED POINTS AND WELL DEFINED PLANIMETRIC DETAIL.

ITEM (VALUES ARE IN MM ON THE MAP)	ACCURACY
POINTS AND PLANIMETRIC DETAIL IN AREAS	
REQUIRING A 20 FOOT DIGITAL HORIZONTAL	
ACCURACY FOR OBSTRUCTION	0.6
POINTS AND PLANIMETRIC DETAIL IN AREAS	
REQUIRING A 50 FOOT DIGITAL HORIZONTAL	
ACCURACY FOR OBSTRUCTIONS	1.3

### 3.1. MISCELLANEOUS

ITEM	(VALUES ARE IN MM ON THE MAP)	ACCURACY
GRAPH DEFINI		
		6. X X X X X X X X X X X X X X X X X X X

### **APPENDIX 6**

## CONTRACTIONS

### **APPENDIX 6: CONTRACTIONS**

The following list presents the approved contractions for data provided under FAA No. 405 standards.

### WORD/ PHRASE

### **CONTRACTION**

A

Abandoned Above Ground Level Accelerate-Stop Distance Available Advisory Circular Agricultural	ABND AGL ASDA AC AG
Air Route Surveillance Radar Aircraft Airport Airport Beacon Airport District Office	ARSR ACFT ARPT APBN ADO
Airport Facility Directory Airport Location Point Airport Obstruction Chart Airport Reference Point Airport Surface Detection Equipment	AFD ALP AOC ARP ASDE
Airport Surveillance Radar Airport Traffic Control Tower Airway Beacon Anemometer Antenna	ASR ATCT AWYBN AMOM ANT
Approach Approach Light Approach Light System Area Navigation Approach Arresting Gear	APCH APP LT ALS ANA A-GEAR
Automated Flight Service Station Automated Surface Observing System Automatic Weather Observing/Reporting System	AFSS ASOS AWOS

#### WORD/ PHRASE **CONTRACTION**

В

Back Course Marker **BCM** Bridge **BRDG** Building **BLDG** 

C

Centerline C/L Ceilometer CLOM Chimney **CLSD** Closed **CTAF** Common Traffic Advisory Frequency

CONST Construction Continuously Operating Reference Station **CORS** 

D

t opinion in the contract of t Direction Finder DF Displaced Threshold **DTHLD** Distance Measuring Equipment **DME** Distance to Centerline **DCLN** Distance to Runway End **DEND** Distance to Threshold **DTHR** 

E

Electrical **ELEC** Elevation EL Elevation **ELEV** Ellipsoid **ELLIP** Engine Out Departure EOD

Equipment **EQUIP Estimated Maximum Elevation EME** 

F

Fan Marker FM Flagpole **FLGPL** Flight Service Station **FSS** 

A6.2.

# WORD/ PHRASE

# **CONTRACTION**

G	
Glide Slope	GS
Global Positioning System	GPS
Ground	GRD
Ground Control Approach	GCA
Н	
TT.	HCB
Hangar	HGR
Height Above Airport	HAA
Height Above Runway Height Above Touchdown	HAR HAT
Heliport Reference Point	HRP
Temport Reference Form	TIKI
Horizontal	HORZ
Horizontal Survey Point	* HSP
I C O O.	
Height Above Runway Height Above Touchdown Heliport Reference Point  Horizontal Horizontal Survey Point  I  Inner Marker Inoperative Instrument Flight Rules Instrument Landing System Instrument Meteorological Conditions	
Inner Marker	IM
Inoperative	INOP
Instrument Flight Rules	IFR
Instrument Landing System	ILS
Instrument Meteorological Conditions	IMC
International Civil Aviation Organization	ICAO
International Earth Rotation Service	ICAO
Terrestrial Reference Frame	ITRF
Intersection	INTXN
J	
None	
**	
K	
None	
TOTIC	
L	
Lead In Lighting System	LDIN
Light	LT
Lighted	LTD
	162

# WORD/ PHRASE

# CONTRACTION

NOTAM

L (Cont.)	
Localizer	LOC
Localizer Type Directional Aid	LDA
Locator Middle Marker	LMM
Locator Outer Marker	LOM
M	
Magnetic Variation	VAR
Mean Sea Level	MSL
Microwave	MCWV
Microwave Landing System	MLS
Microwave Landing System Azimuth Guidance	MLSAZ
Microwave Landing System Elevation Guidance	MLSEL
Middle Marker	MM
Monument	MON
0 0 75	
N	
National Airspace System	NAS
National Flight Data Center	NFDC
National Flight Data Digest	NFDD
National Geodetic Survey	NGS
National Geodetic Vertical Datum of 1929	NGVD 29
National Oceanic and Atmospheric Administration	NOAA
National Ocean Service	NOS
National Spatial Reference System	NSRS
Nautical Mile	NM
Navigational Aid	NAVAID
Nondirectional Radio Beacon	NDB
North American Datum of 1927	NAD 27
North American Datum of 1983	NAD 83
North American Vertical Datum of 1988	NAVD 88
Not Commissioned	NCM
Note to Exceed	NTE
	NOTAN

Notice to Airmen

#### WORD/ PHRASE

#### **CONTRACTION**

O

Observation	OBS
Obstruction	OBST
Obstruction Identification Surface	OIS
Obstruction Lighted	OL
Obstruction Light On	OL ON

Omnidirectional Approach Light System **ODALS** Orthometric **ORTHO** Out Of Service **OTS** 

OT, OM

POC

Sy Mark

Approach Path Indicator

PAPI

Recision Approach Radar

PAR

Primary Airport Control Station

PACS

Pulsating Visual Approach Slope Indicator

Q

None

Railroad	RR
Reflector	RFLTR
Relocated	RELCTD
Remote Communications Outlet	RCO
Remote Transmitter/Receiver	RTR

Road RD Road (Noninterstate) RD (N) Road (Interstate) RD (I) Runway **RWY** Runway Alignment Indicator Lights **RAIL** 

Runway End Identifier Lights **REIL** Runway Visual Range **RVR** 

# WORD/ PHRASE CONTRACTION

S	
Secondary Airport Control Station Simplified Directional Facility Specially Prepared Hard Surface Stack Standard Instrument Departure	SACS SDF SPHS STK SID
Standard Terminal Arrival Standpipe Stopway	STAR SPIPE STWY
T	20
Tactical Air Navigation Aid Tank Taxiway Temporary Threshold	TACAN TK TWY TMPRY THLD
Taxiway Temporary Threshold  Take-off Distance Available Take-off Run Available Touchdown Reflector Touchdown Zone Touchdown Zone Elevation  Tower Transmissometer	TODA TORA TDR TDZ TDZE
Tower Transmissometer Transmission Tower Tri-color Visual Approach Slope Indicator	TWR TMOM TRMSN TWR TRCV
U	
Under Construction Until Further Notice	UNC UFN
V	
Vertical Vertical Survey Point Very High Frequency Omnidirectional Range Visual Approach Slope Indicator Visual Flight Rules	VERT VSP VOR VASI VFR
Visual Meteorological Conditions VOR/Tactical Air Navigation	VMC VORTAC

A6.6.

#### WORD/ PHRASE

#### **CONTRACTION**

W

Wide Area Augmentation System WAAS Wind Direction Indicator WDI WTE'S WSK WGS 84 Wind Tee WTEE Wind Tetrahedron Windsock World Geodetic System of 1984

X

none

Y

none

Z

Z Marker

#### **CONTRACTION**

#### **WORD/ PHRASE**

Α

**ABND** Abandoned AC**Advisory Circular** 

**ACFT** Aircraft

Airport District Office ADO Airport Facility Directory **AFD** 

**AFSS** Automated Flight Service Station 0.0000 0.0000

AG Agricultural A-GEAR Arresting Gear **AGL** Above Ground Level ALP **Airport Location Point** 

ALS Approach Light System

**AMOM** Anemometer

Area Navigation Approach ANA

ANT Antenna

Airport Obstruction Chart **AOC** 

**APBN** Airport Beacon **APCH** Approach APP LT Approach Light

Airport Reference Point **ARP** 

**ARPT** Airport

**ARSR** Air Route Surveillance Radar **ASDA** Accelerate-Stop Distance Available **ASDE** Airport Surface Detection Equipment Automated Surface Observing System **ASOS** 

ASR Airport Surveillance Radar

**ATCT** Airport Traffic Control Tower

**AWOS** Automatic Weather Observing/Reporting System

**AWYBN** Airway Beacon

В

**BCM** Back Course Marker

**BLDG Building BRDG** Bridge

#### CONTRACTION

#### WORD/ PHRASE

 $\mathbf{C}$ 

C/L Centerline
CHY Chimney
CLOM Ceilometer
CLSD Closed
CONST Construction

CORS Continuously Operating Reference Station
CTAF Common Traffic Advisory Frequency

D

DCLN Distance to Centerline
DEND Distance to Runway End

DF Direction Finder

DME Distance Measuring Equipment

DTHLD Displaced Threshold DTHR Distance to Threshold

E

EL Elevation
ELEC Electrical
ELEV Elevation
ELLIP Ellipsoid

EME Estimated Maximum Elevation

EOD Engine Out Departure

EQUIP Equipment

F

FLGPL Flagpole FM Fan Marker

FSS Flight Service Station

G

GCA Ground Control Approach
GPS Global Positioning System

GRD Ground GS Glide Slope

#### **CONTRACTION**

#### WORD/PHRASE

\_\_\_\_\_

Η

HAA Height Above Airport
HAR Height Above Runway
HAT Height Above Touchdown

HGR Hangar HORZ Horizontal

HRP Heliport Reference Point HSP Horizontal Survey Point

I

ICAO International Civil Aviation Organization

IFR Instrument Flight Rules
ILS Instrument Landing System

IM Inner Marker

IMC Instrument Meteorological Conditions

INOP Inoperative INTXN Intersection

ITRF International Earth Rotation Service Terrestrial Reference Frame

J

None

K

None

L

LDIN Lead In Lighting System

LT Light

LDA Localizer Type Directional Aid

LMM Locator Middle Marker

LOC Localizer

LOM Locator Outer Marker

LTD Lighted

#### CONTRACTION WORD/ PHRASE

\_\_\_\_\_

M

MCWV Microwave

MLS Microwave Landing System

MLSAZ Microwave Landing System Azimuth Guidance
MLSEL Microwave Landing System Elevation Guidance

MM Middle Marker

MON Monument
MSL Mean Sea Level

N

NAD 27 North American Datum of 1927 NAD 83 North American Datum of 1983

NAVD 88 North American Vertical Datum of 1988

NAVAID Navigational Aid NCM Not Commissioned

NDB Nondirectional Radio Beacon
NFDC National Flight Data Center
NFDD National Flight Data Digest
NGS National Geodetic Survey

NGVD 29 National Geodetic Vertical Datum of 1929

NM Nautical Mile

NOAA National Oceanic and Atmospheric Administration

NOS National Ocean Service NOTAM Notice to Airmen

NSRS National Spatial Reference System

NTE Not to Exceed

O

OBS Observation
OBST Obstruction

ODALS Omnidirectional Approach Light System
OIS Obstruction Identification Surface

OL Obstruction Lighted

OL ON Obstruction Light On

OM Outer Marker
ORTHO Orthometric
OTS Out Of Service

#### **CONTRACTION**

#### **WORD/PHRASE**

\_\_\_\_\_

P

PACS Primary Airport Control Station
PAPI Precision Approach Path Indicator

PAR Precision Approach Radar

POC Point of Contact

PSM Permanent Survey Mark

PVASI Pulsating Visual Approach Slope Indicator

Q

None

R

RAIL Runway Alignment Indicator Lights
RCO Remote Communications Outlet

RD Road

REIL Runway End Identifier Lights

RELCTD Relocated

RFLTR Reflector

RD (I) Road (Interstate)
RD (N) Road (Noninterstate)

RR Railroad

RTR Remote Transmitter/Receiver

RVR Runway Visual Range

RWY Runway

S

SACS Secondary Airport Control Station
SDF Simplified Directional Facility
SID Standard Instrument Departure
SPHS Specially Prepared Hard Surface

SPIPE Standpipe

STAR Standard Terminal Arrival

STK Stack STWY Stopway

#### **CONTRACTION**

#### WORD/ PHRASE

Т

TACAN Tactical Air Navigation Aid
TDR Touchdown Reflector
TDZ Touchdown Zone

TDZE Touchdown Zone Elevation

THLD Threshold

TK Tank

TMOM Transmissometer TMPRY Temporary

TODA Take-off Distance Available TORA Take-off Run Available

TRCV Tri-color Visual Approach Slope Indicator

TRMSN TWR Transmission Tower

TWR Tower TWY Taxiway

U

UFN Until Further Notice UNC Under Construction

V

VAR Magnetic Variation

VASI Visual Approach Slope Indicator

VERT Vertical

VFR Visual Flight Rules

VMC Visual Meteorological Conditions

VOR Very High Frequency Omnidirectional Range

VORTAC VOR/Tactical Air Navigation

VSP Vertical Survey Point

W

WAAS Wide Area Augmentation System

WDI Wind Direction Indicator

WGS 84 World Geodetic System of 1984

WSK Windsock WTEE Wind Tee

WTET Wind Tetrahedron

### **CONTRACTION**

#### **WORD/PHRASE**

X

None

Y

None


Z

ZM

#### **APPENDIX 7**

# SAMPLE AIRPORT OBSTRUCTION CHART

# A SAMPLE AIRPORT OBSTRUCTION CHART (OC 000) IS FOLDED INSIDE THE BACK COVER

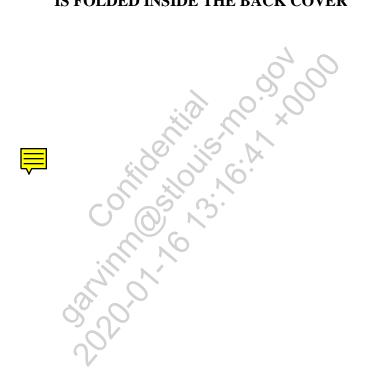

# **GLOSSARY**

## **GLOSSARY**

\_\_\_\_\_

# A,B,C

Accuracy - The degree of conformity with a standard, or a value accepted as correct. Precision is the degree of uniformity of repeated measurements or events. For example, repeat measurements of the distance between two points may exhibit a high degree of precision by virtue of the relative uniformity of the measurements. However, if a "short" tape were used in the measurements, accuracy would be poor in that the measured distance would not conform to the true distance between the points.

Surveying and mapping accuracy standards should include three elements: (1) a stated variation from a true value or a value accepted as correct, (2) the point to which the new value is relative, and (3) the probability that the new value will be within the stated variation. For example, "Horizontal accuracy will be 10 cm relative to the nearest Continuously Operating Reference Station (CORS) at the 95 percent confidence level."

- Abeam Point The point on a line that is nearest to an off line point. For example, a point on the runway centerline is "abeam" the Glide Slope Antenna when the distance from the centerline point to the antenna is a minimum.
- Accelerate-Stop Distance Available (ASDA) The runway plus stopway length declared available and suitable for the acceleration and deceleration of an airplane aborting a takeoff.
- Aeronautical Beacon A visual navigational aid dispaying flashes of white and/or colored light to indicate the location of an airport, a heliport, a landmark, a certain point of a federal airway in mountainous terrain, or an obstruction. (See Airport Rotating Beacon under Airport Lighting.)

- Air Navigation Facility Any facility used in, available for use in, or designed for use in, aid of air navigation, including landing areas, lights, any apparatus or equipment for disseminating weather information, for signaling, for radio-directional finding, or for radio or other electrical communication, and any other structure or mechanism having a similar purpose for guiding or controlling flight in the air or the landing and takeoff of aircraft. (See Navigational Aid.)
- Airport An area on land or water that is used or intended to be used for the landing and takeoff of aircraft and includes its buildings and facilities, if any.
- Airport Elevation The highest point of an airport's usable runways measured in feet from mean sea level (technically, from the vertical datum.)
- Airport Lighting Various lighting aids that may be installed on an airport. Types of airport lighting include:

Airport Rotating Beacon (APBN) - A visual navigational aid operated at many airports. At civil airports, alternating white and green flashes indicate the location of the airport. At military airports, the beacons flash alternately white and green, but are differentiated from civil beacons by dualpeaked (two quick) white flashes between the green flashes.

Approach Light System (ALS) - An airport lighting facility which provides visual guidance to landing aircraft by radiating light beams in a directional pattern by which the pilot aligns the aircraft with the extended centerline of the runway on his final approach for landing. Condenser-Discharge Sequential Flashing Lights/Sequenced

Flashing Lights may be installed in conjunction with the ALS at some airports

Omnidirectional Approach Light System (ODALS) - Seven omnidirectional flashing lights located in the approach area of a nonprecision approach. Five lights are located on the runway centerline extended with the first light located 300 feet from the threshold and extending at equal intervals up to 1,500 feet from the threshold. The other two lights are located, one on each side of the runway threshold, at a lateral distance of 40 feet from the runway edge, or 75 feet from the runway edge when installed on a runway equipped with a VASI.

Runway Alignment Indicator Lights (RAIL) - Sequenced Flashing Lights which are installed only in combination with other light systems.

Runway End Identifier Lights (REIL) - Two Synchronized flashing lights, one on each side of the runway threshold, which provide rapid and positive identification of the approach end of a particular runway.

Precision Approach Path Indicator (PAPI) - A visual approach slope indicator normally consisting of light units similar to the VASI but in a single row of either two or four light units set perpendicular to the runway centerline. The row of light units is normally installed on the left side of the runway. Indications are as follows: Below glide path - all lights red; Slightly below glide path - three lights closest to runway red, other light white; On glide path - two lights closest to runway red, other two lights white; Slightly above glide path - light closest to runway red, other three lights white; Above glide path - all lights white.

Pulsating Visual Approach Slope Indicator (PVASI) - A pulsating visual approach slope indicator normally consisting of a single light unit projecting a two-color visual approach path into

the final approach area of the runway upon which the indicator is installed. The on glide path indication is a steady white light. The slightly below glide path indication is a steady red light. If the aircraft descends further below the glide path, the red light starts to pulsate. The above glide path indication is a pulsating white light. The pulsating rate increases as the aircraft gets further above or below the desired glide slope.

Tri-Color Visual Approach Slope Indicator (TRVC) - A visual approach slope indicator normally consisting of a single light unit projecting a three-color visual approach path into the final approach area of the runway upon which the indicator is installed. The below glide path indication is red, the above glide path indication is amber, and the on glide path indication is green.

Visual Approach Slope Indicator (VASI) - An airport lighting facility providing vertical visual approach slope guidance to aircraft during approach to landing by radiating a directional pattern of high intensity red and white focused light beams which indicate to the pilot is ""on path" if he sees red/white, "above path" if white/white, and "below path" if red/red. Some airports serving large aircraft have three-bar VASI's which provide two visual glide paths to the same runway.

Airport Location Point (ALP) - The permanent position, usually expressed in latitude and longitude, of an airport for identification and reference purposes. The ALP coincides with the original Airport Reference Point. (See Airport Reference Point.)

Airport Reference Point (ARP) - The approximate geometric center of all usable runways. ARP is not monumented, therefore not recoverable on the ground.

Airport Surface Detection Equipment (ASDE) - Radar equipment specifically designed to detect all principal features on the surface of an airport, including aircraft and vehicular traffic, and to present the entire image on a radar indicator

console in the control tower. Used to augment visual observation by tower personnel of aircraft and/or vehicular movements on the runways and taxiways.

- Airport Surveillance Radar (ASR) Approach control radar used to detect and display an aircraft's position in the terminal area. ASR provides range and azimuth information but does not provide elevation data. Coverage of the ASR can extend up to 60 nautical miles.
- Air Route Surveillance Radar (ARSR) Air route traffic control center (ARTCC) radar used primarily to detect and display an aircraft's position while en route between terminal areas.
- Air Route Traffic Control Center (ARTCC) A facility established to provide air traffic control service to aircraft operating on IFR flight plans within controlled airspace and principally during the en route phase of flight. When equipment and controller workload permit, certain advisory/assistance services may be provided to VFR aircraft.
- Apron A defined area on an airport or heliport intended to accommodate aircraft for purposes of loading or unloading passengers or cargo, refueling, parking, or maintenance. With regard to seaplanes, a ramp is used for access to the apron from the water.
- Area Navigation A method of navigation that permits aircraft operation on any desired course within the coverage of station-referenced navigational signals or within the limits of a self-contained system capability. Area navigation systems include GPS, Inertial, and LORAN-C.
- Area Navigation Approach (ANA) An instrument approach procedure using an Area Navigation System.

#### Azimuth

Astronomic - At the point of observation, the angle measured from the vertical plane through the celestial pole and the vertical plane through

the observed object. The astronomic azimuth is established directly from observations on a celestial body and is measured in the plane of the horizon. Astronomic azimuths differs from geodetic azimuths because of the deflection of the vertical which can be greater than one minute of arc in extreme cases. Astronomic azimuths may be reckoned clockwise or counterclockwise, from either north or south, as established by convention.

Geodetic - The angle at point A between the tangent to the meridian at A and the tangent to the geodesic from A to B whose geodetic azimuth is wanted. It may be reckoned clockwise from either geodetic north or south as established by convention. Because of earth curvature, the geodetic azimuth from A to B (forward azimuth) differs from the geodetic azimuth from B to A (back azimuth) by other than 180 degrees, except where A and B have the same geodetic longitude or where the geodetic latitude of both points is zero. The geodesic line is the shortest surface distance between two points on the reference ellipsoid. A geodetic meridian is a line on the reference ellipsoid defined by the intersection of the reference ellipsoid and a plane containing the minor axis of that ellipsoid.

Grid - The angle in the plane of projection between a straight line and the central meridian of a planerectangular coordinate system. Grid azimuths may be reckoned clockwise from either geodetic north or south as established by convention.

Magnetic - At the point of observation, the angle between the vertical plane through the observed object and the vertical plane in which a freely suspended symmetrically magnetized needle, influenced by no transient artificial magnetic disturbance, will come to rest. Magnetic azimuths are reckoned clockwise from magnetic north.

Bench Mark - A relatively permanent natural or artificial material object bearing a marked point whose elevation above or below an adopted surface (datum) is known.

- Blast Fence A barrier that is used to divert or dissipate jet or propeller blast.
- Blast Pad A specially prepared surface placed adjacent to the ends of runways to eliminate the erosive effect of the high wind forces produced by airplanes at the beginning of their takeoff rolls.
- Catenary The curve theoretically formed by a perfectly flexible, uniformly dense and thick, inextensible cable suspended from two points. Also a cable suspended between two points and having the approximate shape of a catenary.
- Clearway An area beyond the takeoff runway under the control of airport authorities within which terrain or fixed obstacles may not extend above specified limits. These areas may be required for certain turbine-powered operations and the size and upward slope of the clearway will differ depending on when the aircraft was certificated.

- Compass Locator A low power, low or medium frequency (L/MF) radio beacon installed at the site of the outer or middle marker of an instrument landing system (ILS). It can be used for navigation at distances of approximately 15 miles or as authorized in the approach procedure.
- Control Station A point on the ground whose position and/or elevation is used as a basis for obtaining positions and/or elevations of other points.
- Continuously Operating Reference Station (CORS) A permanent GPS facility whose GPS receiver continuously provides observables from the GPS satellites, allowing stations occupied temporarily by GPS receivers to be differentially positioned relative to it. CORS are related to the NAD 83 coordinate system at the 1-3 cm level either by being collocated at VLBI sites which were used to define the coordinate system, or by being differentially positioned relative to such a collocated GPS station.

# **D**, **E**, **F**

Datum - In general, a point, line, surface, or set of values used as a reference. A geodetic datum is a set of constants specifying the coordinate system and reference used for geodetic control (See Control Station), ie, for calculating coordinates of points on the earth. At least eight constants are needed to form a complete datum: three to specify the location of the origin of the coordinate system; three to specify the orientation of the coordinate system; and two to specify the dimensions of the reference ellipsoid. Any point has a unique X,Y,Z datum coordinate which can be transformed into latitude, longitude, and ellipsoid height (height relative to the ellipsoid).

A horizontal control datum is a geodetic datum specified by two coordinates (latitude and longitude) on the ellipsoid surface, to which horizontal control points are referenced.

A vertical datum is a theoretical equipotential surface with an assigned value of zero to which elevations are referenced. (See Geoid).

Datum Tie - The process of determining, through appropriate survey methods, a position (horizontal tie) or elevation (vertical tie) of a new point relative to the position/elevation of a control station with established datum values, such as, a control station in the National Spatial Reference System (NSRS). The new point may be a permanent survey monument. This process ensures that the new point will have the proper relationship to NSRS and to all other points tied to NSRS.

Direction Finder (DF) - A radio receiver equipped with a directional sensing antenna used to take bearings on a radio transmitter.

Distance Measuring Equipment (DME) - Equipment (airborne and ground) used to measure, in nautical miles, the slant range distance of an aircraft from the DME navigational aid. DME is usually frequency paired with other navigational aids, such as a VOR or localizer.

Ellipsoid - See Reference Ellipsoid

Ellipsoid Height - The distance, taken along the perpendicular to the ellipsoid, between a point and the reference ellipsoid. Ellipsoid heights are positive if the point is above the ellipsoid. Ellipsoid heights are the heights resulting from GPS observations. Ellipsoid height = Geoid Height + Orthometric Height.

Federal Base Network (FBN) - A fundamental reference network of permanently monumented control stations in the United States at a 1 degree x 1 degree nominal spacing, established, maintained, and monitored by the National Geodetic Survey, providing precise latitude, longitude, ellipsoidal height, orthometric height, and gravity values. The FBN is a very precise subset of the National Spatial Reference System.

Flight Path - A line, course, or track along which an aircraft is flying or intended to be flown.

Frangible Fixture - A fixture designed to break at a predetermined point when struck by a predetermined force to minimize damage if accidently struck by an aircraft.

# **G**, **H**, **I**

- Geoid The theoretical surface of the earth that coincides everywhere with approximate mean sealevel. The geoid is an equipotential surface to which, at every point, the plumb line is perpendicular. Because of local disturbances of gravity, the geoid is irregular in shape.
- Geoid Height The distance, taken along a perpendicular to the reference ellipsoid, between the reference ellipsoid and the geoid. The geoid height is positive if the geoid is above the reference ellipsoid. (Geoid height is negative for the conterminous United States). Geoid Height = Ellipsoidal Height Orthometric Height.
- Global Positioning System (GPS) A space-based radio positioning, navigation, and time-transfer system. The system provides highly accurate position and velocity information, and precise time, on a continuous global basis, to an unlimited number of properly equipped users.
- Ground Controlled Approach (GCA) A radar approach system operated from the ground by air traffic control personnel transmitting instructions to the pilot by radio. The approach may be conducted with airport surveillance radar (ASR) only or with both surveillance and precision approach radar (PAR).
- Helipad A small designated area, usually with a prepared surface, on a heliport, airport, landing/takeoff area, apron/ramp, or movement area used for takeoff, landing, or parking of helicopters.
- Heliport An area of land, water, or structure used or intended to be used for the landing and takeoff of helicopters and includes its buildings and facilities if any.

- Heliport Reference Point (HRP) The geographic position of the heliport expressed in latitude and longitude at, (1) the center of the final approach and takeoff (FATO) area or the centroid of multiple FATO's for heliports having visual and nonprecision instrument approach procedures, or (2) the center of the final approach reference area when the heliport has a precision instrument approach.
- Instrument Landing System (ILS) A precision instrument approach system which normally consists of the following electronic components and visual aids:

Localizer Glide Slope Outer Marker Middle Marker Approach Lighting

- Instrument Runway A runway equipped with electronic and visual navigational aids for which a precision or nonprecision approach procedure having straight-in landing minimums have been approved.
- International Civil Aviation Organization (ICAO) A specialized agency of the United Nations whose objective is to develop the principles and techniques of international air navigation and to foster planning and development of international civil air transport.

# J, K, L

- Landing Area Any locality either on land, water, or structure, including airports/heliports, and intermediate landing fields, which is used, or intended to be used, for the landing and takeoff of aircraft whether or not facilities are provided for shelter, servicing, or for receiving or discharging passengers or cargo.
- Landing Direction Indicator A device, usually a tetrahedron, which visually indicates the direction in which landings and takeoffs should be made.
- Leveling The process of determining the difference in elevation between two points. In geodetic leveling, this process results in a vertical distance from a vertical datum.
  - Direct The determination of differences in elevation by means of a series of horizontal observations on a graduated rod. The leveling instrument maintains a horizontal line of sight through spirit leveling or a compensation mechanism. The rod is observed while it is resting on a point of known elevation (backsight) and then, without disturbing the elevation of the leveling instrument, is observed a second time while resting on the unknown point (foresight). The differential in rod readings is applied to the starting elevation to determine the elevation of the unknown.
  - Indirect The determination of differences in elevation by means other than differential leveling, such as, trigonometric leveling. In trigonometric

- leveling, the vertical angle and distance from the instrument to the point of unknown elevation are measured and the difference in elevation between the instrument and the unknown point is then computed using trigonometry.
- Local Control A control station or network of control stations in a local area used for referencing local surveys. Local control may or may not be tied to the National Spatial Reference System. (See Control Station).
- Localizer (LOC) The component of an ILS which provides course guidance to the runway.
- Localizer Type Directional Aid (LDA) A navigational aid used for nonprecision instrument approaches with utility and accuracy comparable to a localizer but which is not part of a complete ILS and is not aligned with the runway.
- Long Range Navigation (LORAN) An electronic navigation system by which hyperbolic lines of position are determined by measuring the difference in the time of reception of synchronized pulse signals from two fixed transmitters. LORAN A operates in the 1750 1950 kHz frequency band. LORAN C and D operate in the 100 110 kHz frequency band.

# M, N, O

Marker Beacon - An electronic navigational facility transmitting a 75 MHz vertical fan or boneshaped radiation patter to be received by aircraft flying overhead. Marker beacons are identified by their modulation frequency and keying code, and when received by compatible airborne equipment, indicate to the pilot, both aurally and visually, that he is passing over the facility.

Inner Marker (IM) - A marker beacon, used with an ILS Category II precision approach, located between the middle marker and the end of the ILS runway and normally located at the point of designated decision height, normally 100 feet above the touchdown zone elevation, on the ILS Category II approach. It also marks progress during a ILS Category III approach.

Middle Marker (MM)- A marker beacon that defines a point along the glideslope of an ILS, normally located at or near the point of decision height for ILS Category I approaches.

Outer Marker (OM) - A marker beacon at or near the glideslope intercept altitude of an ILS approach. The outer marker is normally located four to seven miles from the runway threshold on the extended centerline of the runway.

- Mean Sea Level (MSL) The average location of the interface between the ocean and atmosphere, over a period of time sufficiently long so that all random and periodic variations of short duration average to zero.
- Minimum Safe Altitude Warning (MSAW) A function of the ARTS III computer that aids the controller by alerting him when a tracked Mode C equipped aircraft is below or is predicted by the computer to go below a predetermined minimum safe altitude.
- Minimums Weather condition requirements established for a particular operation or type of operation; e.g., IFR takeoff or landing, alternate airport for IFR flight plans, VFR flight etc.

Missed Approach - A maneuver conducted by a pilot when an instrument approach cannot be completed to a landing.

- Movement Area The runways, taxiways, and other areas of an airport/heliport which are utilized for taxiing/hover taxiing, air taxiing, takeoff, and landing of aircraft, exclusive of loading ramps and parking areas. At those airports/heliports with a tower, specific approval for entry onto the movement area must be obtained from ATC.
- National Airspace System (NAS) The common network of U.S. airspace; air navigation facilities, equipment and services, airports or landing areas; aeronautical charts, information and services; rules, regulations, and procedures, technical information, and manpower and material. Included are system components shared jointly with the military.
- National Flight Data Center (NFDC) A facility in Washington, D.C., established by FAA to operate a central aeronautical information service for the collection, validation, and dissemination of aeronautical data in support of the activities of government, industry, and the aviation community. The information is published in the "National Flight Data Digest."
- National Flight Data Digest (NFDD) A daily (except weekends and Federal holidays) publication of flight information appropriate to aeronautical charts, aeronautical publications, Notices to Airmen, or other media serving the purpose of providing operational flight data essential to safe and efficient aircraft operations.
- National Spatial Reference System (NSRS) A network of permanent survey monuments located throughout the United States with accurately determined positions (horizontal network) and/or elevations (vertical network). Gravity values, not always monumented, are also part of NSRS.

Responsibility for establishing and maintaining NSRS rests with the National Geodetic Survey under the U.S. Department of Commerce. Current authority is contained in United States Code, Title 33, USC 883a as amended, and specifically defined by Executive Directive, Bureau of the Budget (now Office of Management and Budget) Circular No. A-16 Revised.

- Navigable Airspace Airspace at and above the minimum flight altitude prescribed in the FARs, including airspace needed for safe takeoff and landing.
- Navigational Aid (NAVAID) Any visual or electronic device airborne or on the surface which provides point to point guidance information or position data to aircraft in flight. (See Air Navigation Facility.)
- Nondirectional Beacon (NDB) An L/MF or UHF radio beacon transmitting nondirectional signals whereby the pilot of an aircraft equipped with direction finding equipment can determine his bearing to or from the radio beacon and "home" or track to or from the station. When the NDB is installed in conjunction with an Instrument Landing System marker, it is normally called a Compass Locator.
- Nonprecision Approach Procedure A standard instrument approach procedure in which no electronic glide slope is provided; e.g., VOR, TACAN, NDB, LOC, ASR, LDS, and SDF approaches.
- Notice to Airmen (NOTAM) A notice containing information (not known sufficiently in advance to publicize by other means) concerning the establishment, condition, or change in any

component (facility, service, or procedure of, or hazard in the National Airspace System) the timely knowledge of which is essential to personnel concerned with flight operations.

- Obstruction Any object that penetrates an obstruction identification surface.
- Obstruction Identification Surface (OIS) Any imaginary surface authorized by the Federal Aviation Administration to identify obstructions. Any object that penetrates an OIS is an obstruction, by definition.

Specified OIS - Any OIS other than a supplemental OIS.

Supplemental OIS - An OIS designated by appropriate FAA authorities as a supplemental OIS. A supplemental OIS, when implemented, will normally lie below a specified OIS and is intended to provide additional obstruction information. An object that penetrates a supplemental OIS only is a supplemental obstruction.

- Offset NAVAID A NAVAID used during the final approach segment of a straight in instrument approach and not located on the runway centerline or centerline extended.
- Orthometric Height The distance, taken along the plumb line, between a point and the geoid. Orthometric heights are positive if the point is above the geoid. Orthometric Height = Ellipsoid Height Geoid Height.

# **P**, **Q**, **R**

Planimetry - The plan detail of a map that has no indication of relief or contour.

Plot Point - A point that represents the position of a feature. This point may be located on the feature or located between feature components. For example, the plot point for a Precision Approach Path Indicator (PAPI) system is the center of the light array which falls between light units.

Precision Approach Procedure - A standard instrument approach procedure in which an electronic glideslope/glidepath is provided; e.g., GPS, ILS, and PAR approaches.

Precision Approach Radar (PAR) - Radar equipment, in some ATC facilities operated by FAA and/or the military services at joint use civil/military locations and separate military installations to detect and display azimuth, elevation, and range of aircraft on the final approach course to a runway. This equipment may be used to monitor certain nonradar approaches, but is primarily used to conduct a precision instrument approach wherein the controller issues guidance instructions to the pilot based on the aircraft's position in relation to the final approach course (azimuth), glidepath (elevation), and distance (range) from the touchdown point on the runway as displayed on the radar scope.

Primary Airport Control Station (PACS) - A control station established in the vicinity of, and usually on, an airport, and tied directly to the National Spatial Reference System. PACS must be declared PACS by the National Geodetic Survey and must meet the specific siting, construction, and accuracy requirements for PACS.

Progressive Taxi - Precise taxi instructions given to a pilot unfamiliar with the airport or issued in stages as the aircraft proceeds along the taxi route.

Published Data - Data officially issued for distribution to the public.

Radio Detection and Ranging (RADAR) - A device which, by measuring the time interval between transmission and reception of radio pulses and correlating the angular orientation of the radiated antenna beam or beams in azimuth and/or elevation, provides information on range, azimuth, and/or elevation of objects in the path of the transmitted pulse.

Primary Radar - A radar system in which a minute portion of a radio pulse transmitted from a site is reflected by an object and then received back at the site for processing and display at an air traffic control facility.

Secondary Radar/Radar Beacon (ATCRBS) - A radar system in which the object to be detected is fitted with cooperative equipment in the form of a radio receiver/transmitter (transponder). Radar pulses transmitted from the searching transmitter/receiver (interrogator) site are received in the cooperative equipment and used to trigger a distinctive transmission from the transponder. This reply transmission, rather than a reflected signal, is then received back at the transmitter/receiver site for processing and display at an air traffic control facility.

Radar Approach - An instrument approach procedure which utilizes Precision Approach Radar (PAR) or Airport Surveillance Radar (ASR).

Radio Beacon - See Nondirectional Beacon

Ramp - See Apron

Reference Ellipsoid - A geometric figure comprising one component of a geodetic datum, usually determined by rotating an ellipse about its shorter (polar) axis, and used as a surface of reference for geodetic surveys. The reference ellipsoid closely approximates the dimensions of the geoid, with certain ellipsoids fitting the geoid more closely for various areas of the earth. Elevations derived directly from satellite observations are relative to the ellipsoid and are called ellipsoid heights.

4/15/98 CHANGE 1 FAA No. 405

Remote Communications Outlet (RCO) - An unmanned communications facility remotely controlled by air traffic personnel. RCO's serve flight service stations. Remote Transmitter/Receivers (RTR) serve terminal ATC facilities.

Remote Transmitter/Receiver (RTR) - See Remote Communications Outlet.

Runway - A defined rectangular area on a land airport prepared for the landing and takeoff run of aircraft along its length. Runways are normally numbered in relation to their magnetic direction rounded off to the nearest 10 degrees: e.g., Runway 10, Runway 25.

Runway Length - The straight line distance between runway end points. This line does not account for surface undulations between points. Official runway lengths are normally computed from runway end Solito Siloni, Solito coordinates and elevations.

# S, T, U

- Secondary Airport Control Station (SACS) A control station established in the vicinity of, and usually on, an airport, and tied directly to the Primary Airport Control Station. SACS must be declared SACS by the National Geodetic Survey and must meet the specific siting, construction, and accuracy requirements for SACS.
- Simplified Directional Facility (SDF) A navigational aid used for nonprecision instrument approaches. The final approach course is similar to that of an ILS localizer except that the SDF course may be offset from the runway, generally not more than 3 degrees, and the course may be wider than the localizer, resulting in a lower degree of accuracy.
- Specially Prepared Hard Surface (SPHS) A concrete, asphalt, or other paved surface, or an unpaved surface that has been specially treated to stabilize the surface, protect the subsurface, or provide a smoother rolling surface for aircraft. Unpaved SPHS's include compacted gravel, and gravel treated with a stabilizing bituminous material.
- State Plane Coordinate System A series of planerectangular coordinate systems established by the
  U.S. Coast and Geodetic Survey for the entire
  United States, with a separate system for each
  state. A mathematical relationship exists between
  state plane and geodetic coordinates, one being
  easily transformed into the other. The advantage of
  the State Plane Coordinate System is that it permits
  survey computations for small areas to be
  performed using plane trigonometry (as opposed to
  more complex spherical trigonometry), while still
  yielding very nearly the true angles and distances
  between points.
- Stopway An area beyond the takeoff runway, no less wide than the runway and centered upon the extended centerline of the runway, able to support the airplane during an aborted takeoff, without causing structural damage to the airplane, and designated by the airport authorities for use in decelerating the airplane during an aborted takeoff.

- Supplemental Profile Point A runway/stopway point selected so that a straight line between any two adjacent published runway/stopway points will be no greater than one foot from the runway/stopway surface.
- Take-off Distance Available (TODA) The length of the take-off run available plus the length of the clearway, if provided.
- Take-off Run Available (TORA) The length of the runway declared available and suitable for the ground run of an aeroplane take-off.
- Tactical Air Navigation (TACAN) An ultra-high frequency electronic rho-theta air navigational aid which provides suitably equipped aircraft a continuous indication of bearing and distance to the TACAN station.
- Tetrahedron A device normally located on uncontrolled airports and used as a landing direction indicator. The small end of the tetrahedron points in the direction of landing.
- Threshold (THLD) The beginning of that portion of the runway available for landing. A displaced threshold (DTHLD) is a threshold that is located at a point on the runway other than the designated beginning of the runway. A relocated threshold (RTHLD) is a threshold that is located at the runway end but not at the end of pavement.
- Touchdown Zone (TDZ) The first 3,000 feet of the runway beginning at the threshold.
- Touchdown Zone Elevation (TDZE) The highest elevation in the Touchdown Zone.
- Transmissometer (TMOM) An apparatus used to determine visibility by measuring the transmission of light through the atmosphere. It is the measurement source for determining runway visual range (RVR) and runway visibility value (RVV).

# V, W, X, Y, Z

- V<sub>1</sub> The takeoff decision speed. If a system failure occurs before V<sub>1</sub> the takeoff is aborted. If the failure occurs at or above V<sub>1</sub>, the pilot is committed to continue the takeoff.
- Vertical Takeoff and Landing (VTOL) Aircraft -Aircraft capable of vertical climbs and/or descents and of using very short runways or small areas for takeoff and landings. These aircraft include, but are not limited to, helicopters.
- Very High Frequency Omnidirectional Range Station (VOR) A ground-based electronic navigation aid transmitting very high frequency navigation signals, 360 degrees in azimuth, oriented from magnetic north.
- Very High Frequency Omnidirectional Range/Tactical Air Navigation (VORTAC) A navigation aid providing VOR azimuth, TACAN azimuth, and TACAN distance measuring equipment (DME) at one site.
- Visual Approach An approach conducted on an instrument flight rules (IFR) flight plan which authorizes the pilot to proceed visually and clear of clouds to the airport. The pilot must, at all times, have either the airport or preceding aircraft in sight.

- Visual Glideslope Indicator A navigational aid that provides vertical visual guidance to aircraft during approach to landing by either radiating a directional pattern of high intensity light into the approach area, or providing lighted or unlighted panels which can be aligned by the pilot, thereby allowing the pilot to determine if the aircraft is above, below, or on the prescribed glidepath. (See Airport Lighting).
- Waypoint A predetermined geographical position used for route/instrument approach definition, or progress reporting purposes, that is defined relative to a VORTAC station or in terms of latitude/longitude coordinates.
- Wide Area Augmentation System (WAAS) The total FAA system designed and built to meet the mission needs of insuring satellite integrity for using GPS for required navigation performance (RNP) in the National Airspace System and of improving accuracy to support precision approaches using GPS augmented with the WAAS.